



ECCO HEATING PRODUCTS LTD.

#100 - 1851 Dayton Street, Kelowna

British Columbia, Canada V1Y 9J7

Ph: (250) 860-6451

Fax: (250) 860-3466

Toll Free: 1-800-399-3226

Contact: Grant Weighill, gweighill.kel@eccohtg.com

**INSTALLATION - OPERATION & MAINTENANCE
INSTRUCTIONS**

PROJECT: APPLE VALLEY RESIDENCE
Benvoulin Court

LOCATION: KELOWNA, B.C.

ENGINEER: LESLIE ENGINEERING CORP.

CONTRACTOR: VALLEY PLUMBING & HEATING LTD.

DATE: March 11,2010

PRODUCT: REZNOR - Gas Unit Heaters - UH-1 & UH-2

PRODUCT: REZNOR - Venting Information

PRODUCT: REZNOR - Installtion Instructions



REZNOR[®] Thomas & Betts

Venting Instructions for V3[®] Power Vented Unit Heaters

Vent Installation Form RZ-NA I-UD-V-PV (Version A)
Obsoletes Form RZ-NA I-V-PV

APPLIES TO: Indoor Power Vent
Model UDAP and Model UDBP

Table of Contents

	Page
GENERAL	1
VENTING Requirements	1
RESIDENTIAL Installation, Model UDAP 30-125	2-6
Type of Pipe	2-3
Vent Length and Diameter	2-3
TABLE 1 - Special Horizontal Category I (Sizes 30-75)	2
TABLE 2 - Standard Vertical & Horizontal (Sizes 30-125) ..	3
Flue Outlet Diameter	4
TABLE 3 - Sizes 30-125	4
Sealing	4
Support	4
Condensation	4
Vent Terminal Requirements	4
TABLE 4 - Horizontal Vent Clearances	5
Horizontal Illustration	5
Vertical Illustration	6
COMMERCIAL/INDUSTRIAL Installation, Sizes 30-400	6-9
Type of Pipe	6
Vent Pipe Diameter and Length	6-7
TABLE 5 - Vertical and Horizontal Requirements	7
Flue Outlet Diameter and Attachment	7
TABLE 6 - Outlet Diameter	8
Sealing	8
Support	8
Condensation	8
Vent Terminal Requirements	8
TABLE 7 - Horizontal Vent Clearances	8
Horizontal Illustration	9
Vertical Illustration	9
ADDENDUM	10-12
Section A - Attaching Double Wall (Type B) Vent Pipe	10-11
Section B - Installing Flex-L[®] Category III Vent Pipe	11-12

Use this Venting Manual with the Heater Installation Manual

Heater	Installation Form
Model UDAP	Form I-UDA
Model UDBP	Form I-UDB

General

This manual applies only to venting instructions and must be used with the installation manual. Both manuals are shipped with the heater. If either manual is missing, contact your distributor before beginning installation. The instructions in this manual apply to fan type Model UDAP and blower type Model UDBP.



Verify that the label near the vent outlet on the heater matches this label.

Venting Requirements

Model UDAP and UDBP heaters are certified as Category III heaters. Under specified conditions, Model UDAP Sizes 30-75 may be installed as a Category I heater.

WARNING: Each heater requires its own individual vent pipe run and vent cap. Manifolding of vent runs can cause recirculation of combustion products into the building. Failure to comply could result in severe personal injury or death and/or property damage.

Venting must be in accordance with local codes and the National Fuel Gas Code Z223.1 or CAN/CSA B149.1 and B149.2, Installation Code for Gas Burning Appliances and Equipment. Local requirements supersede national requirements.

These power-vented unit heaters are designed to operate safely and efficiently with either a horizontal or vertical vent. Comply with the specific requirements and instructions.

If this heater is replacing an existing heater, be sure that the vent is sized properly for the heater being installed and that the existing vent is in good condition. A properly sized vent system is required for safe operation of the heater. An improperly sized vent system can cause unsafe conditions and/or create condensation. Do not vent into an existing gravity vent or chimney.

Installation should be done by a qualified agency in accordance with these instructions. The qualified service agency installing this system is responsible for the installation.

Requirements and instructions vary depending on whether the installation is residential or commercial/industrial. Select and follow the venting instructions that apply to the installation only. All sizes of Model UDAP and Model UDBP unit heaters are certified for commercial/industrial installation. Model UDAP Sizes 30, 45, 60, 75, 100, and 125 are also certified for residential installation. Unit heaters certified for "residential use" are intended to be used as supplementary heating devices in residential areas such as workshops and garages. They are not intended to be the primary source of heat in residential applications or to be used in sleeping quarters.

Is the Installation Residential or Commercial/Industrial?

Select and follow the venting instructions that apply. Do not mix any instructions or requirements.

- Residential - **Pages 2-6**
- Commercial/Industrial - **Pages 6-9**

Residential Installation

Only Model UDAP 30, 45, 60, 75, 100, 125

1. Type of Vent Pipe is Determined by whether Vent is 1A). Special Horizontal, 1B). Standard Horizontal, or 1C). Vertical

A residential unit may be installed with either a horizontal or vertical vent run using one of the types of vent pipe listed in 1A), 1B), or 1C).

1A). Special Horizontal Vent (Category I) - applies to Sizes 30, 45, 60, 75 only

Maximum horizontal vent pipe length is five feet (1.5M) - See FIGURE 1.

- 26 gauge or heavier galvanized steel single-wall pipe, OR
- Double-wall (Type B) vent pipe

IMPORTANT NOTE: If the installation does not comply with the requirement of 5 ft (1.5M) or less of horizontal pipe length, ignore FIGURE 1. Unless specifically referenced in FIGURE 1, do not mix the venting requirements in FIGURE 1 with the requirements for any other type of residential or commercial installation.

FIGURE 1 - Vent Pipe Length and Configuration for a Model UDAP Heater with a Special Horizontal Vent only

Applies only to UDAP Sizes 30, 45, 60, and 75 with five feet (1.5M) maximum horizontal length of vent pipe

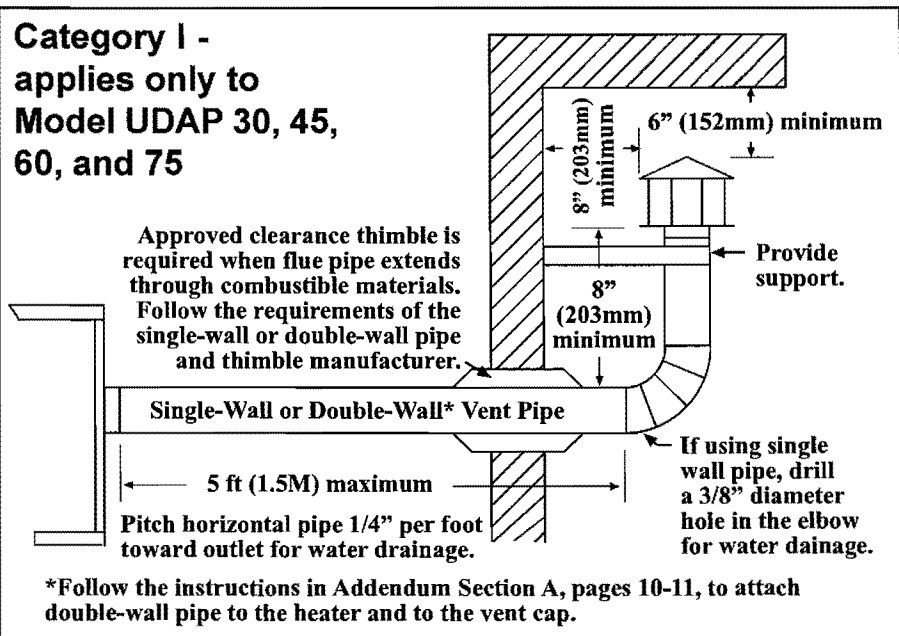


TABLE 1 - Vent Pipe Diameter for Model UDAP Heater with Special Horizontal Vent only

List of Venting Requirements for Model UDAP Heater Installation with a Special Horizontal Vent as illustrated in FIGURE 1 only

Model UDAP Size	Vent Pipe Diameter		Venter Outlet Diameter		Field-supplied taper-type "enlarger" required to connect pipe to venter outlet	
	inches	mm	inches	mm	inches	mm
30	4	102	4	102	None	
45	5	127	4	102	4 to 5	102 to 127
60	5	127	4	102	4 to 5	102 to 127
75	5	127	4	102	4 to 5	102 to 127

- **MAXIMUM** horizontal vent length is 5 feet (1.5M) (not including the elbow that connects to the vertical portion)
NOTE: The only elbow permitted is the one that connects to the vertical.
- **MINIMUM** vertical vent height is 8 inches (203mm).

Residential Installation

Only Model UDAP 30, 45, 60, 75, 100, 125

FIGURE 1 Special Venting Requirements (cont'd)

- **Pipe** - Use either type of pipe listed above for Special Horizontal Vent (Category I). Use only diameter listed in TABLE 1 above.
- **Sealing** - Seal all joints and seams of single-wall vent pipe inside the building with aluminum tape or silicone sealant. If using double-wall pipe, follow the pipe manufacturer's instructions. When connecting double-wall to heater and vent cap, see Addendum Section A, pages 10-11, for illustrated instructions.
- **Terminal** - Use a Reznor or equivalent vent cap and comply with horizontal vent terminal clearances (See TABLE 4, page 5.).
- **Elbow** - If using single-wall pipe, drill a 3/8" diameter hole in the elbow for water drainage (Refer to FIGURE 1 illustration).
Installation Tip: If using single-wall pipe, making the elbow rigid by adding silicone sealant to the full circumference of all elbow section joints will help to stabilize the vent.

1. Type of Vent Pipe (cont'd)

1B). Standard Horizontal Vent (Category III)

- Vent pipe approved for Category III heater

1C). Vertical Vent (Category III)

- Vent pipe approved for Category III heater

Or, if at least 75% of the equivalent length of the vent run is vertical

- Double-wall (Type B) vent pipe, OR
- 26-gauge or heavier galvanized steel single-wall pipe

2. Vent Pipe Diameter and Maximum Vent Length

TABLE 2 - Vent Pipe Diameter and Maximum Vent Length for a Heater with either a Standard Horizontal or a Vertical Vent

- Use only one diameter of vent pipe on an installation.
- Minimum vent length is 3 feet (1M).

Vent pipe diameters and maximum vent lengths in TABLE 2 apply to both **Standard Horizontal** and **Vertical** vents. Add **all** straight sections and equivalent lengths for elbows. The total combined length must not exceed the **Maximum Vent Length**.

UDAP	Vent Pipe Diameter		Maximum Vent Length		Equivalent Straight Length for 90° Elbow		Equivalent Straight Length for 45° Elbow		Field-supplied taper type connection required at the vent outlet
	inches	mm	feet	M	feet	M	feet	M	
30	3	76	20	6.1	3	0.9	1.5	0.5	4" to 3" (102mm to 76mm) reducer
	4	102	10	3.0	2	0.6	1	0.3	None
45	3	76	20	6.1	3	0.9	1.5	0.5	4" to 3" (102mm to 76mm) reducer
	4	102	10	3.0	2	0.6	1	0.3	None
60	3	76	30	9.1	4	1.2	2	0.6	4" to 3" (102mm to 76mm) reducer
	4	102	15	4.6	2	0.6	1	0.3	None
75	4	102	30	9.1	4	1.2	2	0.6	None
100	4	102	40	12.2	5	1.5	2.5	0.8	None
125	4	102	40	12.2	5	1.5	2.5	0.8	None

Residential Installation

Only Model UDAP 30, 45, 60, 75, 100, 125

3. Venter (Flue) Outlet Diameter

Depending on the size of vent pipe (either 3 or 4 inch) as determined in Step No. 2, attach 4" vent pipe directly to the collar or use a taper-type reducer to attach 3" pipe.



NOTE: If attaching double-wall pipe to the heater, follow instructions in Addendum, Section A, page 11.

TABLE 3 - Venter Outlet Diameter

UDAP Size	30		45		60		75		100		125	
Outlet Diameter	inches	mm	inches	mm	inches	mm	inches	mm	inches	mm	inches	mm
	4	102	4	102	4	102	4	102	4	102	4	102

4. Vent System Sealing

Vent system joints depend on the type of pipe being used:

- If using single wall, 26-gauge or heavier galvanized pipe, secure slip-fit connections using sheetmetal screws or rivets. Seal all joints and seams of single-wall vent pipe inside the building with aluminum tape or silicone sealant.
- If using Category III vent pipe, follow the pipe manufacturer's instructions for joining pipe sections. When attaching Category III pipe to the venter outlet or the vent cap, make secure, sealed joints following a procedure that best suits the style of Category III pipe being used.
- If using double-wall (Type B) vent pipe, follow the pipe manufacturer's instructions for joining pipe sections.

For joining double-wall pipe to outlet collar, single-wall pipe, and vent cap, follow the illustrated instructions for attaching double-wall pipe (Type B) in Addendum Section A, pages 10-11.

5. Vent System Support

Support horizontal runs every six feet (1.8M). Support vertical runs of Type "B" double-wall or Category III vent pipe in accordance with the requirements of the pipe manufacturer. Support vertical single-wall pipe in accordance with accepted industry practices. Do not rely on the heater or the adapter box for support of either horizontal or vertical pipes. Use non-combustible supports on vent pipe.

6. Condensation

Single-wall vent pipe run through an unheated area or an area with an ambient temperature of 45°F or less must be insulated along its entire length with a minimum of 1/2" foil-faced fiberglass, 1-1/2# density insulation. Insulation rated for 250°F is required.

Where extreme conditions are anticipated, install a means of condensate disposal.

7. Vent Terminal (Pipe and Vent Cap)

The vent terminal pipe must be either Category III vent pipe or double-wall (Type B). Heaters must be equipped with a Reznor vent cap, a Type L Breidert *Air-x-hauster*® vent cap, or equivalent. A different style vent cap could cause nuisance problems or unsafe conditions. The vent cap must be the same size as the vent pipe. See **TABLE 4** and **FIGURE 2** for requirements of a horizontal vent terminal. See **FIGURE 3** for requirements of vertical vent termination.

See Addendum Section A, page 10, for illustrated instructions for attaching double-wall pipe (Type B) to the vent cap or to a vertical single-wall vent run.

For Category III vent pipe, follow the vent pipe manufacturer's instructions. See Addendum Section B, pages 11-12, for instructions on installing Flex L® Category III vent pipe (a specific brand of Category III vent pipe).

Residential Installation

Only Model UDAP 30, 45, 60, 75, 100, 125

TABLE 4 - Horizontal Vent Terminal Clearances

A vent cap is required. Maintain a clearance of 6 to 12 inches (152-305mm) from the wall to the vent terminal cap for stability under wind conditions.

Products of combustion can cause discoloration of some building finishes and deterioration of masonry materials. Applying a clear silicone sealant that is normally used to protect concrete driveways can protect masonry materials. If discoloration is an esthetic problem, relocate the vent or install a vertical vent.


Structure	Minimum Clearances for Vent Termination Location (all directions unless specified)
Forced air inlet within 10 ft (3.1M)	3 ft (0.9M) above
Combustion air inlet of another appliance	6 ft (1.8M)
Door, window, or gravity air inlet (any building opening)	4 ft (1.2M) horizontally 4 ft (1.2M) below 1 ft (305mm) above
Electric meter, gas meter*, gas regulator*, and relief equipment	U.S. - 4 ft (1.2M) horizontally Canada - 6 ft (1.8M) horizontally)
Gas regulator *	U.S. - 3 ft (0.9M) Canada - 6 ft (1.8M)
Adjoining building or parapet	6 ft (1.8M)
Adjacent public walkways	7 ft (2.1M) above
Grade (ground level)	1 ft (305mm) above**

*Do not terminate the vent directly above a gas meter or service regulator.
** Consider local snow depth conditions. The vent must be at least 6" (152mm) higher than anticipated snow depth.

FIGURE 2 - Standard Horizontal Vent Terminal - Residential

NOTE: Read all measurements; drawing is not proportional.

*Follow the instructions in Addendum Section A, page 10, to join a double-wall vent terminal section to the vent cap.

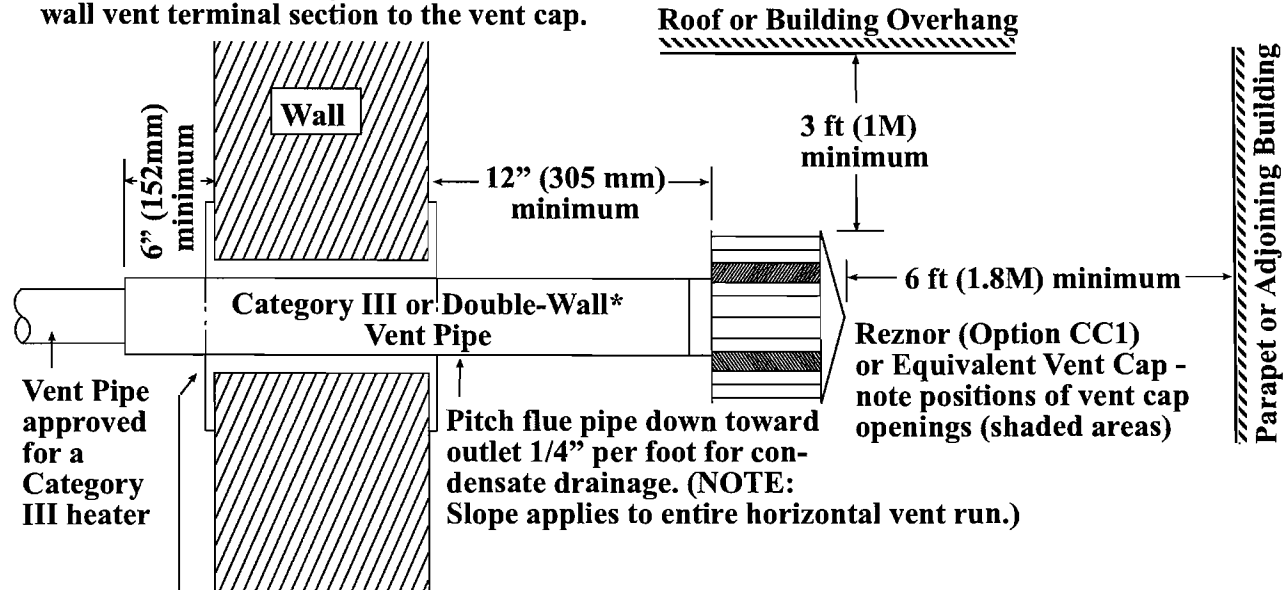

Approved clearance thimble is required when flue pipe extends through combustible materials. Follow the requirements of the thimble and/or vent pipe manufacturer.


Residential Installation

Only Model UDAP 30, 45, 60, 75, 100, 125

7. Vent Terminal (Pipe and Vent Cap) - cont'd

**FIGURE 3 -
Vertical Vent
Terminal -
Residential
Installation**

NOTE: Read all
measurements;
drawing is not
proportional.

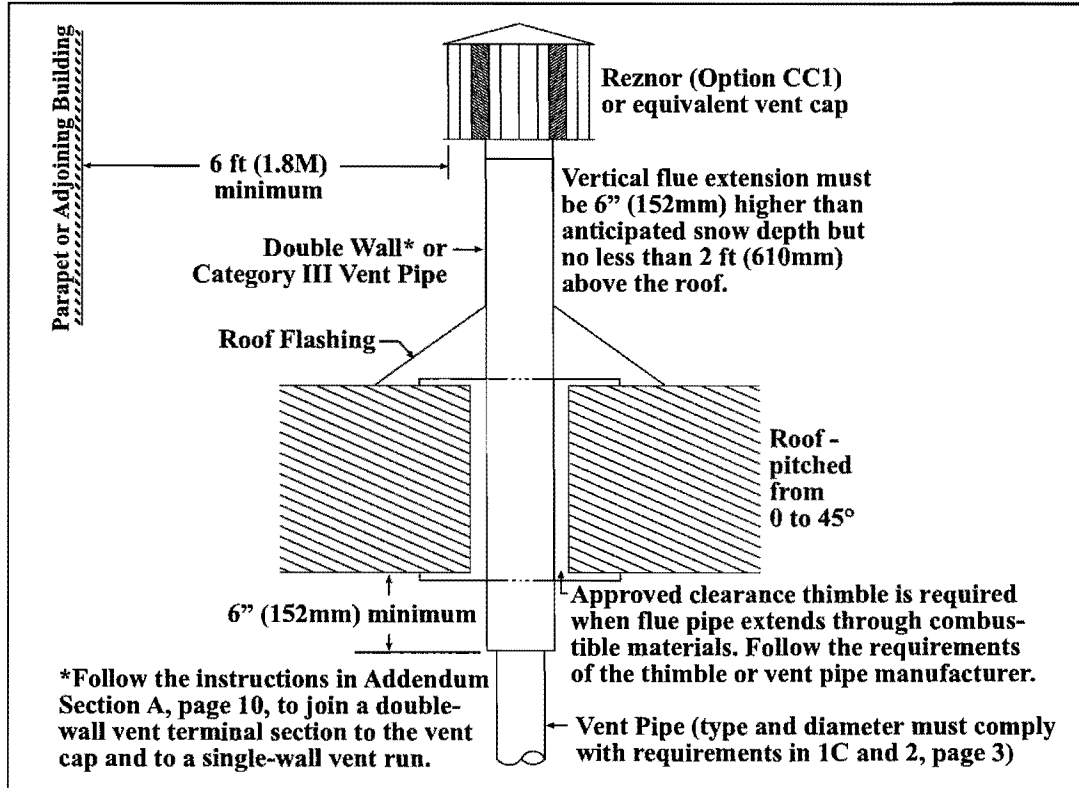

Commercial/Industrial Installation

Models UDAP and UDBP - All Sizes

1. Type of Vent Pipe is Determined by whether Vent is Horizontal or Vertical

A commercial/industrial installation may have either a horizontal or a vertical vent run using one of the types of vent pipe listed.

Horizontal

- Vent pipe approved for a Category III appliance, OR
- Appropriately sealed 26-gauge or heavier galvanized steel or equivalent single-wall pipe

Vertical

- Vent pipe approved for a Category III appliance, OR
- Appropriately sealed 26-gauge or heavier galvanized steel or equivalent single-wall pipe

OR, if at least 75% of the equivalent length of the vent run is vertical

- Double-wall (Type B) vent pipe

Commercial/Industrial Installation

Models UDAP and UDBP - All Sizes

2. Vent Pipe Diameter and Length

Vent pipe diameters and maximum vent lengths in TABLE 5 apply to both **Horizontal** and **Vertical** vents. Add **all** straight sections and equivalent lengths for elbows. The total combined length must not exceed the **Maximum Vent Length**.

TABLE 5 - Vent Pipe Diameter and Length for Horizontal and Vertical Vents

- Use only one diameter of vent pipe on an installation.
- Minimum vent length is 3 feet (1M).

UDAP and UDBP	Vent Pipe Diameter		Maximum Vent Length		Equivalent Straight Length for 90° Elbow		Equivalent Straight Length for 45° Elbow		Field-supplied taper type connection required at the venter outlet
	inches	mm	feet	M	feet	M	feet	M	
30	3	76	20	6.1	3	0.9	1.5	0.5	4" to 3" (102mm to 76mm) reducer
	4	102	10	3	2	0.6	1	0.3	None
45	3	76	20	6.1	3	0.9	1.5	0.5	4" to 3" (102mm to 76mm) reducer
	4	102	10	3	2	0.6	1	0.3	None
60	3	76	30	9.1	4	1.2	2	0.6	4" to 3" (102mm to 76mm) reducer
	4	102	15	4.6	2	0.6	1	0.3	None
75	4	102	30	9.1	4	1.2	2	0.6	None
100	4	102	40	12.2	5	1.5	2.5	0.8	None
125	4	102	40	12.2	5	1.5	2.5	0.8	None
150	5	127	35	10.7	5	1.5	2.5	0.8	None
175	5	127	35	10.7	5	1.5	2.5	0.8	None
200	5	127	50	15.2	5	1.5	2.5	0.8	None
225	5	127	50	15.2	5	1.5	2.5	0.8	None
250	5	127	50	15.2	5	1.5	2.5	0.8	None
300	6	152	50	15.2	5	1.5	2.5	0.8	None
350	6	152	50	15.2	7	2.1	3.5	1.1	None
	7	178	50	15.2	4.5	1.4	2.25	0.7	6" to 7"(152 to 178mm) enlarger
400	6	152	50	15.2	8	2.4	4	1.2	None
	7	178	50	15.2	5	1.5	2.5	0.8	6" to 7"(152 to 178mm) enlarger

3. Venter (Flue) Outlet

Venter Outlet Attachment Requirements:

Depending on the size of vent pipe as determined in Step No. 2, attach either the vent pipe directly to the collar or a taper-type connector.

TABLE 6 - Venter Outlet Size

UDAP or UDBP		30	45	60	75	100	125	150	175	200	225	250	300	350	400
Outlet Diameter	inches	4	4	4	4	4	4	5	5	5	5	5	6	6	6
	mm	102	102	102	102	102	102	127	127	127	127	127	152	152	152

NOTE: If attaching double-wall pipe to the heater, follow instructions in Addendum, Section A, page 11.

Commercial/Industrial Installation

Models UDAP and UDBP - All Sizes

4. Vent System Sealing

Vent system joints depend on the type of pipe being used (See "Type of Vent Pipe", Requirement No. 1, page 6).

- If using single wall, 26-gauge or heavier galvanized pipe, secure slip-fit connections using sheetmetal screws or rivets. Seal all joints and seams of single-wall vent pipe inside the building with aluminum tape or silicone sealant.
- If using Category III vent pipe, follow the pipe manufacturer's instructions for joining pipe sections. When attaching Category III pipe to the venter outlet or the vent cap, make secure, sealed joints following a procedure that best suits the style of Category III pipe being used.
- If using double-wall (Type B) vent pipe, follow the pipe manufacturer's instructions for joining pipe sections.
For joining double-wall pipe to heater collar, single-wall pipe, and vent cap, follow the illustrated instructions in Addendum Section A, pages 10-11.

5. Vent System Support

Horizontal runs should be supported every six feet (1.8M) using a non-combustible material, such as strap steel or chain. Do not rely on the heater for support of either horizontal or vertical vent pipe.

6. Condensation

On all Model Sizes, any length of single-wall vent pipe exposed to cold air or run through an unheated area or an area with an ambient temperature of 45°F or less must be insulated along its entire length with a minimum of 1/2" foil-faced fiberglass, 1-1/2# density insulation.

Where extreme conditions are anticipated, install a means of condensate disposal.

7. Vent Terminal (Pipe and Vent Cap)

The vent terminal pipe must be either Category III vent pipe or double-wall (Type B). Heaters must be equipped with a Reznor vent cap, a Type L Breidert *Air-x-hauster*® vent cap, or equivalent. A different style vent cap could cause nuisance problems or unsafe conditions. The vent cap must be the same size as the vent pipe. See TABLE 7 and FIGURE 4 for requirements of a horizontal vent terminal. See FIGURE 5 for requirements of vertical vent termination.

TABLE 7 - Horizontal Vent Terminal Clearances

A vent cap is required. Maintain a clearance of 6 to 12 inches (152-305mm) from the wall to the vent terminal cap for stability under wind conditions.

Products of combustion can cause discoloration of some building finishes and deterioration of masonry materials. Applying a clear silicone sealant that is normally used to protect concrete driveways can protect masonry materials. If discoloration is an esthetic problem, relocate the vent or install a vertical vent.

Structure	Minimum Clearances for Vent Termination Location (all directions unless specified)
Forced air inlet within 10 ft (3.1M)	3 ft (0.9M) above
Combustion air inlet of another appliance	6 ft (1.8M)
Door, window, or gravity air inlet (any building opening)	4 ft (1.2M) horizontally 4 ft (1.2M) below 1 ft (305mm) above
Electric meter, gas meter*, gas regulator*, and relief equipment	U.S. - 4 ft (1.2M) horizontally Canada - 6 ft (1.8M) horizontally)
Gas regulator *	U.S. - 3' (0.9M); Canada - 6' (1.8M)
Adjoining building or parapet	6 ft (1.8M)
Adjacent public walkways	7 ft (2.1M) above
Grade (ground level)	1 ft (305mm) above**

*Do not terminate the vent directly above a gas meter or service regulator.
** Consider local snow depth conditions. The vent must be at least 6" (152mm) higher than anticipated snow depth.


Commercial/Industrial Installation

Models UDAP and UDBP - All Sizes

FIGURE 4 - Horizontal Vent Terminal - Commercial/Industrial

NOTE: Read all measurements; drawing is not proportional.


*Follow the instructions in Addendum Section A, page 10, to join a double-wall vent terminal section to a single-wall vent run and to the vent cap.

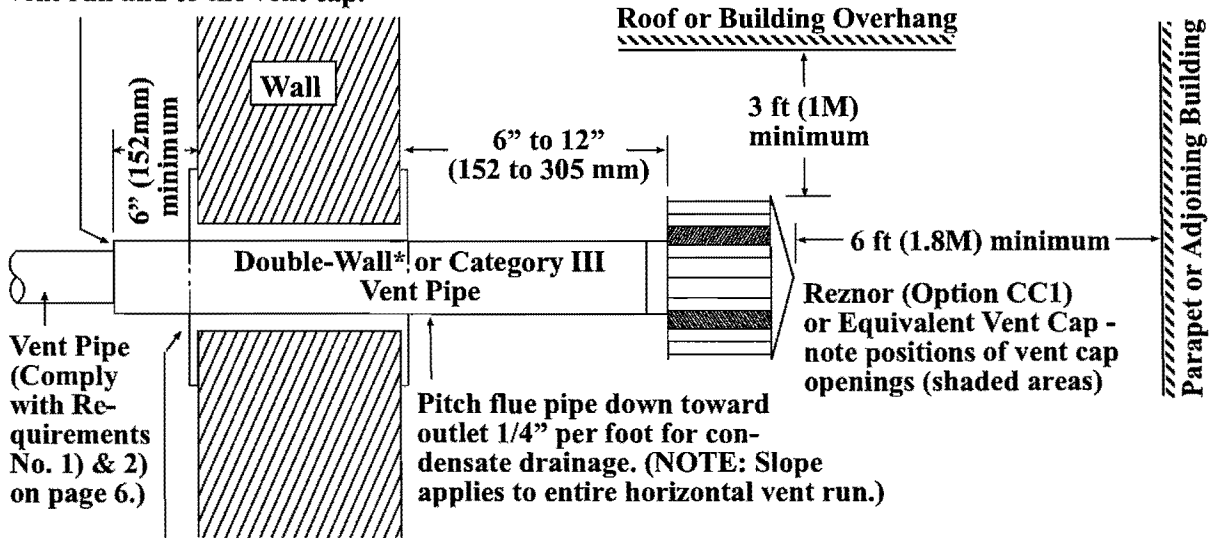

Approved clearance thimble is required when flue pipe extends through combustible materials. Follow the requirements of the thimble and/or the vent pipe manufacturer.

FIGURE 5 - Vertical Vent Terminal - Commercial/Industrial

NOTE: Read all measurements; drawing is not proportional.

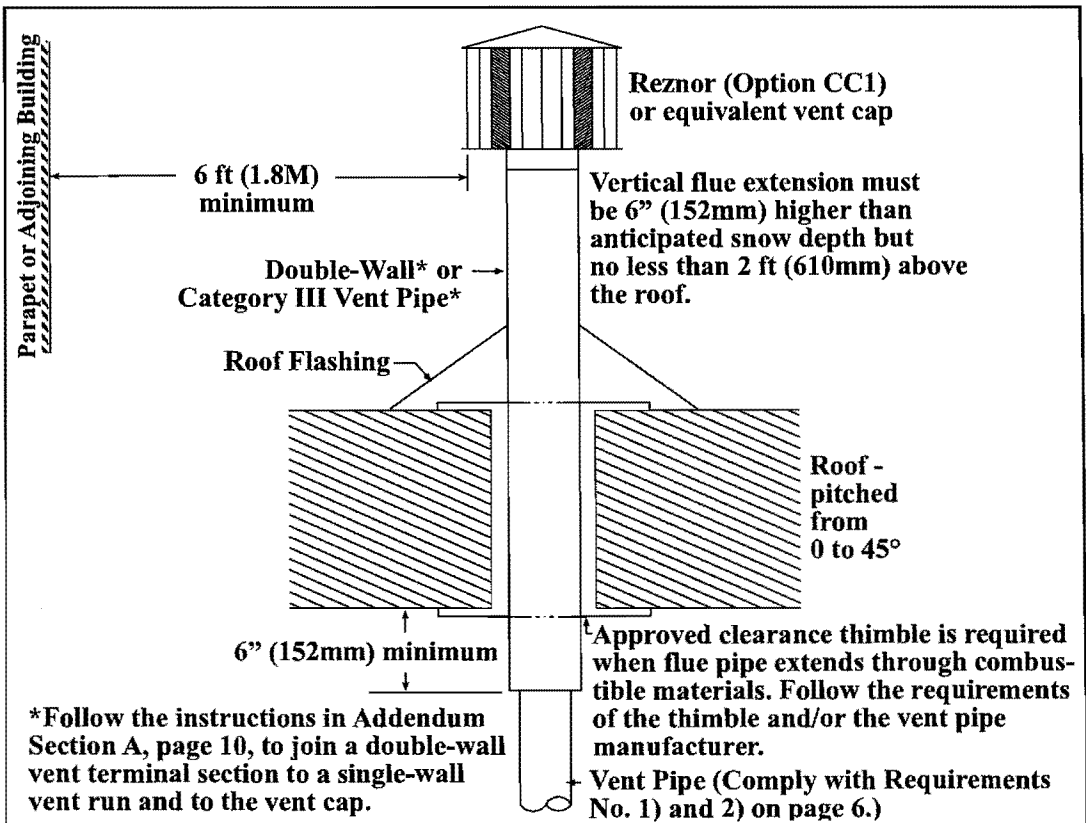

*Follow the instructions in Addendum Section A, page 10, to join a double-wall vent terminal section to a single-wall vent run and to the vent cap.

ADDENDUM
Section A -
Instructions for
Attaching
Double-Wall
Vent Pipe
(Type-B)

FIGURE 6 - Attaching
Double-Wall (Type B)
Pipe to Single Wall
Pipe

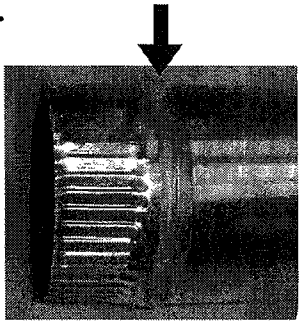
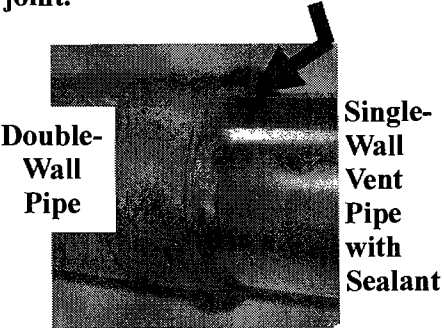
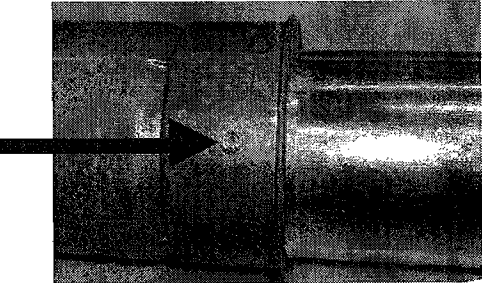
<p>Figure 6 - STEP 1 On the single-wall pipe, where illustrated, place a continual 1/4 inch bead of silicone sealant around the circumference. Do STEP 2 immediately following STEP 1.</p>  <p>Single-Wall Vent Pipe</p>	<p>Figure 6 - STEP 2 Insert the single-wall pipe into the inner pipe of the double-wall pipe until the bead of sealant contacts the inner pipe creating a sealed joint.</p>  <p>Double-Wall Pipe</p> <p>Single-Wall Vent Pipe with Sealant</p>
<p>Figure 6 - STEP 3 Spaced equally around the double-wall pipe, drill three small holes below the sealant ring. Insert 3/4 inch long sheetmetal screws to secure the joint. Do not over tighten screws.</p> 	

FIGURE 7 - Attaching Double-Wall (Type B) Pipe to a Vent Cap

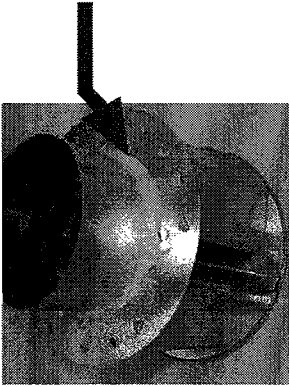
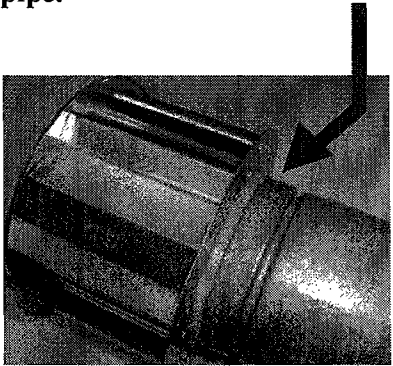

<p>Figure 7 - STEP 1 Place a continual 3/8" bead of silicone sealant around the circumference of the vent cap collar. This will prevent any water inside the vent cap from running down the double-wall pipe. Do STEP 2 immediately following STEP 1.</p> 	<p>Figure 7 - STEP 2 Insert the collar on the vent cap inside the inner wall of the double-wall pipe. Insert as far as possible. Add additional silicone sealant to fully close any gaps between the vent cap and the double wall pipe. This is necessary to prevent water from entering the double wall pipe.</p> 	<p>Figure 7 - STEP 3 Secure the vent cap to the double wall pipe by drilling and inserting a 3/4" long sheetmetal screw into the vent cap collar. Do not over tighten screw.</p> 
---	--	--

FIGURE 8 - Attaching Double-Wall (Type-B) Vent Pipe to the Heater

Figure 8 - STEP 1

Place a continual 1/4" bead of silicone sealant around the circumference of the venter outlet collar. Do STEP 2 immediately after STEP 1.


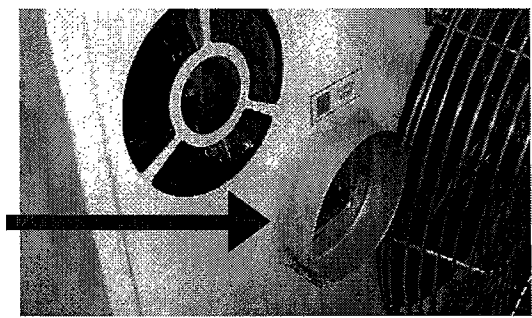


Figure 8 - STEP 2

Slide the double-wall pipe over the collar so that the collar is inside the inner pipe. Push the double-wall pipe tight to the heater cabinet. To secure the connection, spaced equal distance around the pipe, drill and insert three 3/4" long sheetmetal screws through the pipe and into the collar. Do not over tighten the screws.

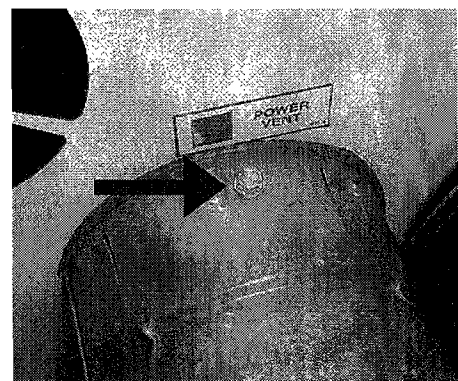


ADDENDUM
Section B -
Instructions for
Installing Flex-L®
Category III Vent
Pipe on a
Reznor® Model
UDAP or UDBP
Power-Vented
Heater


FIGURE 9 -Flex-L® Vent Pipe Adapters

SUPPLIER NOTE: The adapters for Flex-L® vent pipe illustrated in Figure 9 are not available from Reznor or Thomas & Betts; the adapters are available from a Flex-L® vent pipe distributor. These instructions are designed to assist the contractor who has selected to use Flex-L® brand Category III vent pipe to install a Reznor power vented heater with a 4" (102mm) venter outlet.

1. Attach the Adapter Pipe or Reducer to the Venter Collar

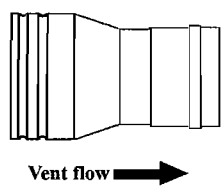

4" to 3" (102 to 76mm) diameter, 6-3/4" long Adapter Reducer, Flex-L® #SRARZA43, specially designed for attaching Flex-L® Category III vent pipe to a Reznor® Model UDAP or UDBP 30, 45, and 60 for 3" (76mm) diameter vent pipe.

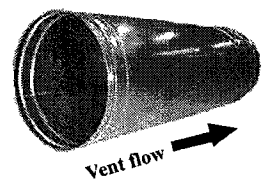


4" (102mm) diameter, 12" long Adapter Pipe, Flex-L® #SRARZA4, specially designed for attaching Flex-L® Category III vent pipe to a Reznor® Model UDAP or UDBP 30, 45, 60, 75, 100, and 125 for 4" (102mm) diameter vent pipe.

- a) On the end of the adapter or reducer that attaches to the venter collar (the end of the adapter with the double emboss without the locking ring hole), run a continuous bead of high temperature silicone around the inside of the pipe. See FIGURE 10.
- b) Push the adapter pipe or reducer over the flue collar.
- c) On the top of the overlap, drill a 1/8" hole and insert a sheetmetal screw to secure the connection.

ADDENDUM, Section B (cont'd)

Instructions for Installing Flex-L® Category III Vent Pipe (cont'd)

FIGURE 10 - Attach to Venter Outlet

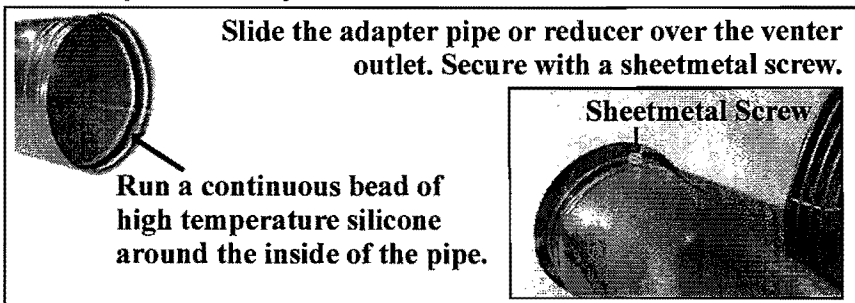

2. Run the Vent Pipe

- Refer to either the residential or commercial/industrial venting instructions in this manual for vent length requirements.
- If using a 4" to 3" (102 to 76mm) reducer - Following the vent pipe manufacturer's instructions, attach a straight piece of 3" diameter horizontal pipe or an elbow in any direction above horizontal.
If using a 4" (102mm) diameter, 12" (305mm) long adapter pipe - Following the vent pipe manufacturer's instructions, attach one of the following:
 - an elbow in any direction above horizontal, or
 - a straight horizontal pipe

FIGURE 11 - Extend vent in any direction above horizontal


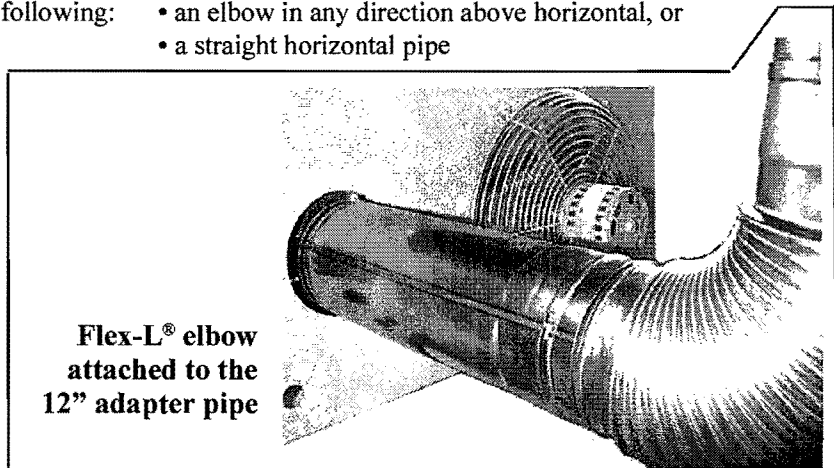


FIGURE 12 - Attach Vent Cap

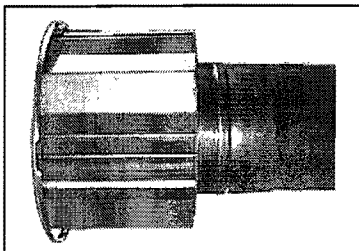

- Follow the pipe manufacturer's instructions to connect the vent pipe sections and install the vent pipe run. The length of vent must not exceed the maximum allowed for the heater being installed.
- Extend the vent pipe through the wall or roof to the outdoors. An approved clearance thimble is required when flue pipe extends through combustible materials. Follow the requirements of the pipe and thimble manufacturer. Be sure to comply with local and national codes when selecting the vent terminal location. The vent pipe installer is responsible for following the manufacturer's instructions and complying with all applicable codes.


3. Attach the Vent Cap (FIGURE 12)

- Use a Type L Breidert *Air-x-hauster*® or equivalent vent cap (either supplied as an option or field-supplied).
- Slide the vent cap collar into the vent pipe.
- Around the end of the vent pipe, drill three evenly spaced 1/8" holes through the vent pipe and vent cap. Insert sheetmetal screws to secure the vent cap to the vent pipe.

(800) 695-1901; www.RezSpec.com

Thomas & Betts

© 2005 Thomas & Betts Corporation, All rights reserved.
MANUFACTURER OF HEATING, COOLING, AND VENTILATING SYSTEMS
Trademark Notes: Reznor®, V3® and TCORE™ are trademarks of Thomas & Betts.
Type L *Air-x-hauster*® is a trademark of the G. C. Breidert Company.
Flex-L® is a trademark of Flex-L International Corporation.
5/05 Form RZ-NA I-UD-V-PV (Version A.5)

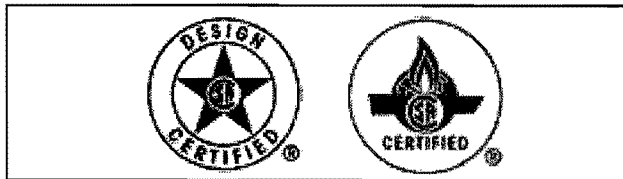

REZNOR *Thomas & Betts*

**Model UDAP and Model UDAS
V3® Series Fan-Type
Unit Heaters**

Installation/Operation **FORM I-UDA (Version A)**
Obsoletes FORM RZ-NA I-UDA

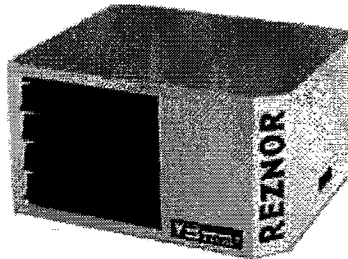


Table of Contents	
	Page
Warnings	1
Installation/Operation	2-25
Check/Test/Startup	26-28
Maintenance/Service	28-36
Index (by page)	
Burner	16, 29
Burner Orifice	31
Burner Removal	29
California Warning Label	3
Clearances	7
Controls	17
Installation Codes	2
Confined Space (UDAP)	8
Dimensions	4-5
Disconnect, Built-in (UDAS)	16, 34
Door Switch (UDAS)	19, 33
Downturn Nozzle (Option)	4
Electrical Connections	16
Fan	32
Fan Motor	22, 32
Flame Rollout Switch	19, 34
Gas Piping and Pressures	12
Gas Valve	22, 33
General	2
Hanging the Heater	10
Hazard Intensity Levels	2
Heat Exchanger Maintenance	29
High Altitude	7, 14
Ignition System	19, 31
Limit Control	19, 33
Location (Heater)	9
Maintenance Schedule	28
Pressure Switch (Combustion Air)	18, 33
Replacement Parts	See Form P-UD
Sound Data	6
Startup	26
Suspending Heater	4
Technical Data	6
Thermostat (Option)	17
Throw (Heater)	9
Transformer	33
Troubleshooting	34-36
Uncrating and Preparation	3
Valve Outlet Pressure	14
Vent System	34
Venter Motor	32
Venting UDAP	Use Form I-UD-V-PV
Venting UDAP-CV	Use Form I-UD-V-CV
Venting UDAS	Use Form I-UD-V-SC
Warranty	3
Wiring Diagrams	23-25

FOR YOUR SAFETY

What to do if you smell gas:

- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call your fire department.

FOR YOUR SAFETY

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

WARNING: Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury, or death. Read the installation, operation, and maintenance instructions thoroughly before installing or servicing this equipment.

WARNING: Gas-fired appliances are not designed for use in hazardous atmospheres containing flammable vapors or combustible dust, in atmospheres containing chlorinated or halogenated hydrocarbons, or in applications with airborne silicone substances. See Hazard Levels, page 2.

WARNING: Should overheating occur, or the gas supply fail to shut off, shut off the manual gas valve to the appliance before shutting off the electrical supply.

WARNING: Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and replace any gas control that has been under water.

Hazard Levels of Warnings in this Manual

1. General

BOTH this manual and the correct venting manual are REQUIRED for installation of this heater.

HAZARD INTENSITY LEVELS

1. **DANGER:** Failure to comply will result in severe personal injury or death and/or property damage.
2. **WARNING:** Failure to comply could result in severe personal injury or death and/or property damage.
3. **CAUTION:** Failure to comply could result in minor personal injury and/or property damage.




Model UDAP 30, 45, 60, 75, 100, and 125 and Model UDAS 30, 45, 60, 75, 100, and 125 are design certified by the Canadian Standards Association for use in residential, industrial, and commercial installations. Unit heaters certified for "residential use" are intended to be used as supplementary heating devices in residential areas such as workshops and garages. They are not intended to be the primary source of heat in residential applications or to be used in sleeping quarters. Residential standards are CSA CR-96-0005 and International Requirement 10.96.

Models UDAP 150, 175, 200, 225, 250, 300, 350, and 400 and UDAS 150, 175, 200, 225, 250, 300, 350, and 400 are design certified by the Canadian Standards Association for use in industrial and commercial installations only.

All models and sizes are available for use with either natural or propane gas. The type of gas, the input rate and the electrical supply requirement is shown on the heater's rating plate. Check the rating plate to determine if the heater is appropriate for the intended installation.

Installation requires both this manual **AND** the venting manual.

Venting Manual by Model

Model	Venting Instruction Manual by Form No.	Look for Matching Label on Venting Manual and Heater
UDAP	Standard Power Vent Installation (each heater has its own dedicated vent) - Form RZ-NA I-UD-V-PV	 Label with Red Square
UDAP-CV with Option AV6	Optional Common Vent Installation (must be equipped with Option AV6) - Form RZ-NA I-V-CV	 Label with Blue Triangle
Model UDAP-CV is available in Sizes 30, 45, 60, 75, 100 only		
UDAS	Separated Combustion - Form RZ-NA I-UD-V-SC	 Label with Green Circle

Both this installation manual and the appropriate venting manual are shipped with the heater. Verify that the literature is correct for the heater being installed. If either manual is missing or incorrect, contact your distributor before beginning installation.

The instructions in this manual apply **only** to the models listed.

Installation should be done by a qualified agency in accordance with these instructions. The qualified service agency installing this heater is responsible for the installation.

2. Installation Codes

These units must be installed in accordance with local building codes. In the absence of local codes, in the United States, the unit must be installed in accordance with the National Fuel Gas Code, ANSI Z223.1. A Canadian installation must be in accordance with the CSA B149 Installation Codes. These codes are available from CSA Information Services, 1-800-463-6727. Local authorities having jurisdiction

Special Installations (Aircraft Hangars/ Repair Garages/ Parking Garages)

should be consulted before installation is made to verify local codes and installation procedure requirements.

Installations in aircraft hangars should be in accordance with ANSI/NFPA No. 409 (latest edition), Standard for Aircraft Hangars; in public garages in accordance with ANSI/NFPA No. 88A (latest edition), Standard for Parking Structures; and for repair garages in accordance with ANSI/NFPA No. 88B (latest edition), Standard for Repair Garages. In Canada, installations in aircraft hangars should be in accordance with the requirements of the enforcing authorities, and in public garages in accordance with CSA B149 codes.

California Warning Label

If the heater is being installed in the state of California, the installer **MUST** attach a warning label on the outside of the access door. The California Warning label is shipped in the owner's envelope along with this manual, the warranty form, and any other paperwork that applies.

If installation is in California, select a location on the heater access panel. Be sure the surface is clean and dry and adhere the label.

Massachusetts Requirement

If the heater is being installed in the Commonwealth of Massachusetts, these units must be installed by a licensed plumber or licensed gas fitter.

3. Warranty

Refer to the limited warranty information on the Warranty Card in the "Owner's Envelope".

Warranty is void if ...

- a. Wiring is not in accordance with the diagram furnished with the heater.
 - b. The unit is installed without proper clearance to combustible materials.
 - c. A fan model is connected to a duct system or if the air delivery system is modified.
-

4. Uncrating and Preparation

This unit was test operated and inspected at the factory prior to crating and was in operating condition. If the heater has incurred any damage in shipment, document the damage with the transporting agency and contact an authorized Reznor Distributor. If you are an authorized Distributor, follow the FOB freight policy procedures as published by Thomas & Betts for Reznor products.

Check the rating plate for the gas specifications and electrical characteristics of the heater to be sure that they are compatible with the gas and electric supplies at the installation site.

Read this booklet and become familiar with the installation requirements of your particular heater. If you do not have knowledge of local requirements, check with the local gas company or any other local agencies who might have requirements concerning this installation.

Before beginning, make preparations for necessary supplies, tools, and manpower. If the installation includes optional vertical louvers, downturn nozzle, ceiling mounting bracket, hanger kit, high altitude kit, multiple heater control, sensor for DDC control, and/or stepdown transformer, install these options before the heater is suspended. Complete instructions are in this form or in the option package; option packages are shipped separately.

Other shipped separate items could include a vent/combustion air kit, high temperature tape, a thermostat bracket kit, a thermostat, and/or a thermostat guard. Be sure all options ordered are at the installation site.

IMPORTANT: Shipping brackets are attached with cabinet screws. When removing shipping brackets, re-insert ALL screws into the cabinet.

5. Dimensions

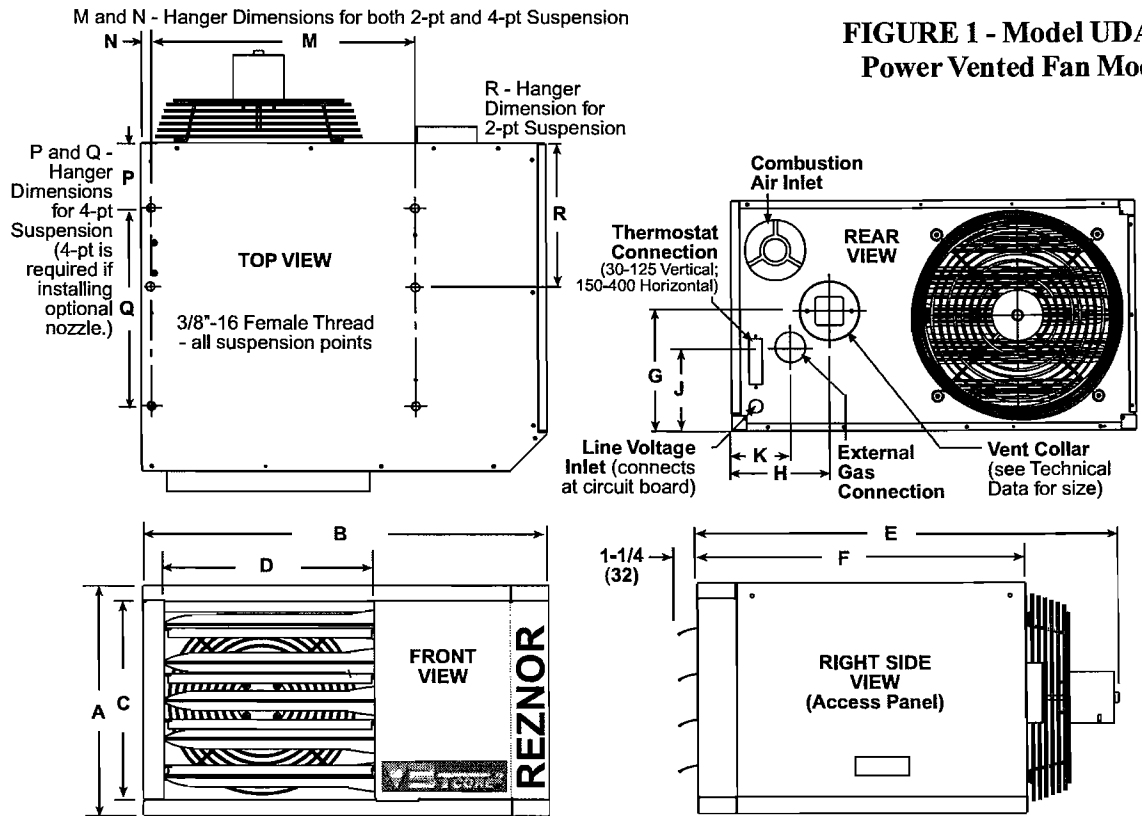


FIGURE 1 - Model UDAP, Power Vented Fan Model


MODEL UDAP DIMENSIONS (inches ± 1/16)

Size	A	B	C	D	E	F	G	H	J	K	M	N	P	Q	R
30, 45	12-1/8	26-5/8	10	13-13/16	26	21-9/16	5-3/16	6-1/2	2-11/16	3-7/8	17-3/8	11/16	4-5/16	13	9-9/16
60	15-1/8	26-5/8	13	13-13/16	27	21-9/16	7-7/8	6-1/2	5-1/2	3-7/8	17-3/8	11/16	4-5/16	13	10-1/2
75	15-1/8	26-5/8	13	13-13/16	27-5/8	21-9/16	7-7/8	6-1/2	5-1/2	3-7/8	17-3/8	11/16	4-5/16	13	10-1/2
100	23-1/8	26-5/8	21	13-13/16	28-5/8	21-9/16	14-1/2	6-1/2	8-3/4	3-7/8	17-3/8	11/16	4-5/16	13	10-1/2
125	23-1/8	26-5/8	21	13-13/16	29-3/8	21-9/16	14-1/2	6-1/2	8-3/4	3-7/8	17-3/8	11/16	4-5/16	13	10-1/2
150, 175, 200	20-1/8	38-3/16	16	23	42	35-3/8	8-1/2	8-1/4	5-7/16	6-1/2	25-11/16	1-3/8	8-3/16	22-3/16	16-3/8
225, 250	26-1/8	38-3/16	22	23	42	35-3/8	13-1/16	8-13/16	9	6-1/2	25-11/16	1-3/8	8-3/16	22-3/16	15-5/8
300, 350, 400	34-1/8	41	30	23	42	35-3/8	17-1/16	9	11-13/16	7-5/16	27-11/16	1-3/8	8-3/16	22-3/16	16-3/16

MODEL UDAP DIMENSIONS (mm ± 2)


Size	A	B	C	D	E	F	G	H	J	K	M	N	P	Q	R
30, 45	308	676	254	351	660	548	132	165	68	98	441	17	110	330	243
60	384	676	330	351	686	548	200	165	140	98	441	17	110	330	267
75	384	676	330	351	702	548	200	165	140	98	441	17	110	330	267
100	587	676	533	351	727	548	368	165	222	98	441	17	110	330	267
125	587	676	533	351	746	548	368	165	222	98	441	17	110	330	267
150, 175, 200	511	970	406	584	1067	899	216	210	138	165	652	35	208	564	416
225, 250	664	970	559	584	1067	899	332	224	229	165	652	35	208	564	397
300, 350, 400	867	1041	762	584	1067	899	433	229	300	186	703	35	208	564	411

FIGURE 2 - With Optional Downturn Nozzle Dimension "U" -- Applies to both UDAP and UDAS

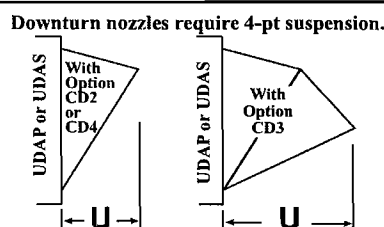

Size	Options CD2 and CD4		Option CD3	
	inches	mm	inches	mm
30, 45	7-1/8	181	12-3/8	314
60, 75	8-5/8	219	15	381
100, 125	12-5/8	321	21-7/8	556
150, 175, 200	11-1/2	292	19-7/8	505
225, 250	14-1/2	368	25-1/8	638
300, 350, 400	18-1/2	470	32	813

**FIGURE 3 - Model UDAS,
Separated Combustion Fan
Model**

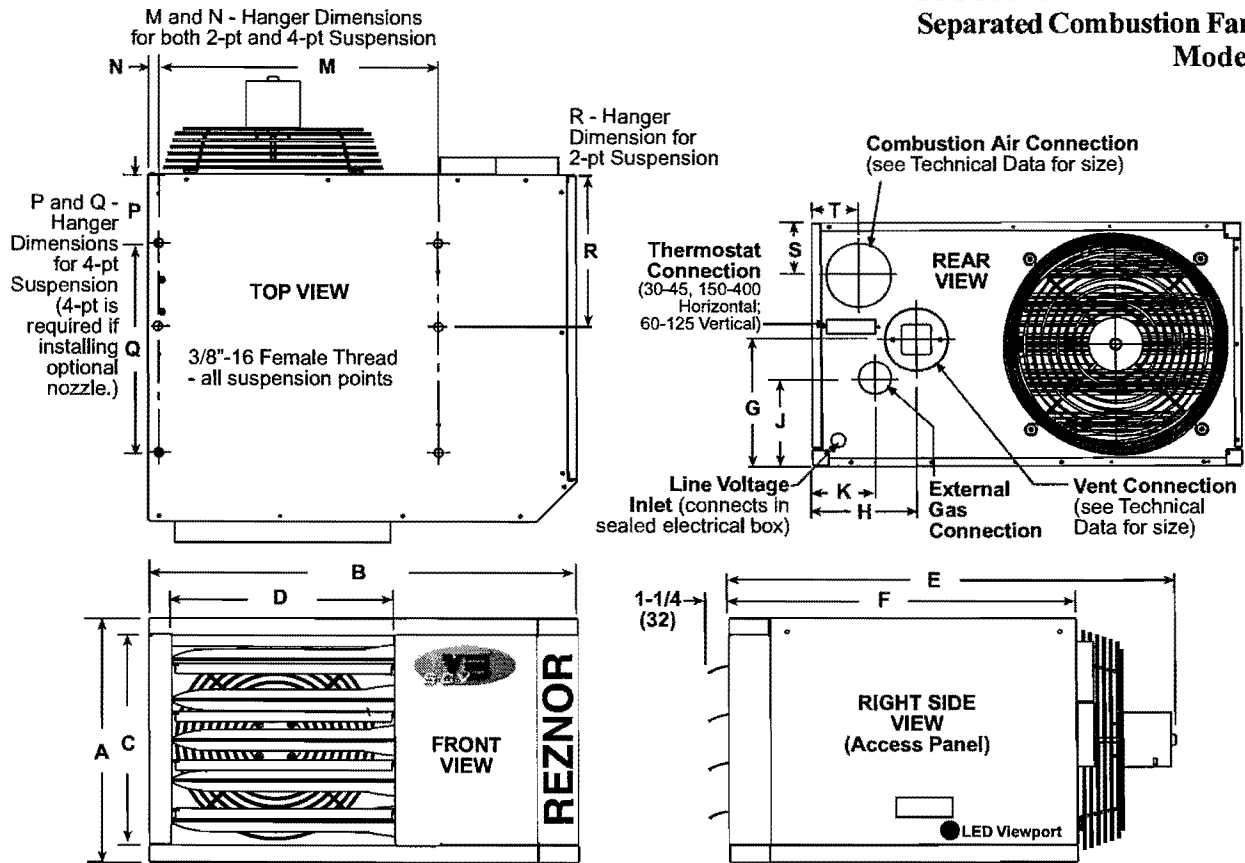

MODEL UDAS DIMENSIONS (inches ± 1/16)

Size	A	B	C	D	E	F	G	H	J	K	M	N	P	Q	R	S	T
30, 45	12-1/8	26-5/8	10	13-13/16	26	21-9/16	5-3/16	6-1/2	2-11/16	3-7/8	17-3/8	11/16	4-5/16	13	9-9/16	2-15/16	2-15/16
60	15-1/8	26-5/8	13	13-13/16	27	21-9/16	7-7/8	6-1/2	5-1/2	3-7/8	17-3/8	11/16	4-5/16	13	10-1/2	3-1/4	2-15/16
75	15-1/8	26-5/8	13	13-13/16	27-5/8	21-9/16	7-7/8	6-1/2	5-1/2	3-7/8	17-3/8	11/16	4-5/16	13	10-1/2	3-1/4	2-15/16
100	23-1/8	26-5/8	21	13-13/16	28-5/8	21-9/16	14-1/2	6-1/2	8-3/4	3-7/8	17-3/8	11/16	4-5/16	13	10-1/2	4-5/8	2-15/16
125	23-1/8	26-5/8	21	13-13/16	29-3/8	21-9/16	14-1/2	6-1/2	8-3/4	3-7/8	17-3/8	11/16	4-5/16	13	10-1/2	4-5/8	2-15/16
150, 175, 200	20-1/8	38-3/16	16	23	42	35-3/8	8-1/2	8-1/4	5-7/16	6-1/2	25-11/16	1-3/8	8-3/16	22-3/16	16-3/8	4-1/8	8-5/16
225, 250	26-1/8	38-3/16	22	23	42	35-3/8	13-1/16	8-13/16	9	6-1/2	25-11/16	1-3/8	8-3/16	22-3/16	15-5/8	5-9/16	8-5/16
300, 350, 400	34-1/8	41	30	23	42	35-3/8	17-1/16	9	11-13/16	7-5/16	27-11/16	1-3/8	8-3/16	22-3/16	16-3/16	9-1/16	8-9/16

MODEL UDAS DIMENSIONS (mm ± 2)

Size	A	B	C	D	E	F	G	H	J	K	M	N	P	Q	R	S	T
30, 45	308	676	254	351	660	548	132	165	68	98	441	17	110	330	243	75	75
60	384	676	330	351	686	548	200	165	140	98	441	17	110	330	267	89	75
75	384	676	330	351	702	548	200	165	140	98	441	17	110	330	267	89	75
100	587	676	533	351	727	548	368	165	222	98	441	17	110	330	267	117	75
125	587	676	533	351	746	548	368	165	222	98	441	17	110	330	267	117	75
150, 175, 200	511	970	406	584	1067	899	216	210	138	165	652	35	208	564	416	105	211
225, 250	664	970	559	584	1067	899	332	224	229	165	652	35	208	564	397	141	211
300, 350, 400	867	1041	762	584	1067	899	433	229	300	186	703	35	208	564	411	230	217

6. Technical Data

TECHNICAL DATA - Sizes 30 - 125 (Data applies to both Models UDAP and UDAS unless noted otherwise.)

Size		30	45	60	75	100	125
Input Heating Capacity	BTUH	30,000	45,000	60,000	75,000	105,000	120,000
	kw	8.8	13.2	17.6	22.0	30.8	35.2
Thermal Efficiency (%)		82	83	83	83	83	83
Output Heating Capacity ^A	BTUH	24,600	37,350	49,800	62,250	87,150	99,600
	kw	7.2	11.0	14.6	18.3	25.6	29.2
Gas Connection (inches) ^B	Natural	1/2	1/2	1/2	1/2	1/2	1/2
	Propane	1/2	1/2	1/2	1/2	1/2	1/2
Vent Connection ^C (inches diameter)		4	4	4	4	4	4
Combustion Air Inlet ^C (inches diameter) - UDAS only		4	4	4	4	4	4
Control Amps (24 volt)		1.0	1.0	1.0	1.0	1.0	1.0
Full Load Amps (115 volt)		1.9	2.4	2.4	3.3	3.9	5.1
Maximum Over Current	Standard 115V	15	15	15	15	15	15
Protection ^{D E}	Optional 208V or 230V	15	15	15	15	15	15
Normal Power Consumption (watts)		109	155	155	217	276	354
Discharge Air Temperature Rise (°F)		50	55	60	60	60	60
Air Volume	CFM	456	629	769	961	1345	1537
	M ³ /minute	12.9	17.8	21.8	27.5	36.7	45.9
Discharge Air Opening Area	ft ²	0.96	0.96	1.25	1.25	2.01	2.01
	M ²	0.09	0.09	0.12	0.12	0.19	0.19
Output Velocity	FPM	475	656	616	770	668	763
	M/minute	145	200	188	238	196	245
Fan Motor HP ^E	Standard Open	0.02	0.03	0.03	0.06	1/30	1/20
	Optional Enclosed	N.A.	N.A.	N.A.	N.A.	1/4	1/4
Fan Motor RPM		1550	1550	1550	1550	1050	1050
Fan Diameter (inches)		10	10	12	12	16	16
Sound Level	dba @ 15 ft	40	40	40	49	54	55

TECHNICAL DATA - Sizes 150 - 400 (Data applies to both Models UDAP and UDAS unless noted otherwise.)

Size		150	175	200	225	250	300	350	400
Input Heating Capacity	BTUH	150,000	175,000	200,000	225,000	250,000	300,000	350,000	400,000
	kw	43.9	51.2	58.6	65.9	73.2	87.8	102.5	117.1
Thermal Efficiency (%)		83	83	83	83	83	83	83	83
Output Heating Capacity ^A	BTUH	124,500	145,250	166,000	186,750	207,500	249,000	290,500	332,000
	kw	36.4	42.5	48.6	54.7	60.8	72.9	85.1	97.2
Gas Connection (inches) ^B	Natural	1/2	1/2	1/2	3/4	3/4	3/4	3/4	3/4
	Propane	1/2	1/2	1/2	3/4	3/4	3/4	3/4	3/4
Vent Connection ^C (inches diameter)		5	5	5	5	5	6	6	6
Combustion Air Inlet ^C (inches diameter) - UDAS only		6	6	6	6	6	6	6	6
Control Amps (24 volt)		1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0
Full Load Amps (115 volt)		3.8	3.8	4.6	7.5	7.5	10.7	10.7	10.7
Maximum Over Current	Standard 115V	15	15	15	15	15	20	20	20
Protection ^{D E}	Optional 208V or 230V	15	15	15	15	15	15	15	15
Normal Power Consumption (watts)		392	392	491	747	747	1086	1086	1086
Discharge Air Temperature Rise (°F)		60	60	60	60	60	60	60	60
Air Volume	CFM	1921	2242	2562	2882	3202	3843	4483	5123
	M ³ /minute	54.4	63.5	72.5	81.6	90.7	108.8	126.9	145.1
Discharge Air Opening Area	ft ²	2.56	2.56	2.56	3.51	3.51	4.79	4.79	4.79
	M ²	0.24	0.24	0.24	0.33	0.33	0.45	0.45	0.45
Output Velocity	FPM	752	877	1003	820	911	802	936	1069
	M/minute	229	267	306	250	278	244	285	
Fan Motor HP ^E	Standard Open	1/6	1/6	1/6	1/4	1/4	1/2	1/2	1/2
	Optional Enclosed	1/4	1/4	1/4	1/4	1/4	1/2	1/2	1/2
Fan Motor RPM		1050	1050	1050	1050	1050	1050	1050	1050
Fan Diameter (inches)		18	18	18	20	20	24	24	24
Sound Level	dba @ 15 ft	51	52	53	56	56	59	61	62

^A CSA ratings for altitudes to 2000 ft.

^B Size shown is for gas connection to a single-stage gas valve, not supply line size.

^C Smaller and/or larger vent and combustion air pipe diameters may be permissible. For Model UDAS refer to the Venting Installation Manual for Separated Combustion Units. For Model UDAP refer to the Venting Installation Manual for Power Vented units. For a Model UDAP with Option AV6, refer to the Venting Installation Manual for Common Venting.

^D MOCP = 2.25 x (largest motor FLA) + smallest motor FLA. Answer is rounded to the next lower standard circuit breaker size.

^E Except where indicated, information in this table is based on a heater equipped with a standard 115 volt open fan motor.

7. High Altitude Operation

Gas valve adjustment for high altitude can only be done after heater is operating; see Paragraph 12.

If the heater is being installed at an elevation above 2000 ft (610M), the input rate will have to be derated. This is done by adjusting the valve outlet pressure.


In addition, if the heater is being installed at an altitude above 6000 ft (1830M), the pressure switch will have to be changed. If ordered with the unit as Option DJ20 or DJ21, the pressure switch is shipped separately for field installation.

Adjusting the valve outlet pressure is done after the heater is in operation; follow the instructions in Paragraph 12. Capacities and inputs for derated units are also listed in Paragraph 12.

If the pressure switch needs to be changed, do that before the heater is operated; follow the instructions in FIGURE 4.

FIGURE 4 - Installing High Altitude Pressure Switch required above 6000 ft (1830M) elevation

Model UDAP														
Size	30	45	60	75	100	125	150	175	200	225	250	300	350	400
High Altitude Switch P/N	197031		197032			197031			201160			201161		
Negative Pressure OFF Setpoint "w.c.	0.35		0.45			0.35			1.00			1.30		
Label color	Purple		Pink			Purple			Brown			White		
Model UDAP-CV with Option AV6 for Common Venting														
Size	30	45	60	75	100									
High Altitude Switch P/N	197029	197032	196362	196388										
Negative Pressure OFF Setpoint "w.c.	0.60	0.45	0.55	0.50										
Label color	Lt Blue	Pink	White	Orange										
Model UDAS														
Size	30	45	60	75	100	125	150	175	200	225	250	300	350	400
High Altitude Switch P/N	197029				196388	197030	197031		201160			201161		
Differential Pressure OFF Setpoint "w.c.	0.60				0.50	0.40	0.35		1.00			1.30		
Label color	Lt. Blue				Orange	Green	Purple		Brown			White		

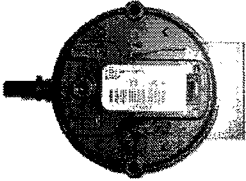

Instructions for Changing Pressure Switch

1. In the control compartment, locate the pressure switch.
2. Mark and disconnect the two wires attached to the pressure switch.
3. Disconnect the sensing tubes from the pressure switch.
4. Locate the two screws holding the switch mounting bracket. Remove the screws and the pressure switch. Save the screws.
5. Using the same screws, install the high altitude pressure switch. Attach the sensing tubes and wires.

Pressure Switch

8. Clearances

Units must be installed so that the clearances in the table are provided for combustion air space, inspection and service, and for proper spacing from combustible construction. Clearance to combustibles is defined as the minimum distance from the heater to a surface or object that is necessary to ensure that a surface temperature of 90°F above the surrounding ambient temperature is not exceeded.

Clearances

Size	Top		Flue Connector		Access Panel		Non-Access Side		Bottom*		Rear	
	inches	mm	inches	mm	inches	mm	inches	mm	inches	mm	inches	mm
30 - 125	1	25	6	152	18	457	1	25	1	25	18	457
150 - 400	4	102	6	152	18	457	2	51	1	25	18	457

*Suspend the heater so that the bottom is a minimum of 5 feet (1.5M) above the floor.

9. Combustion Air - applies to Model UDAP and Model UDAP-CV

(Note: For Model UDAS, see Venting Manual for combustion air requirements.)

Combustion Air Requirements for a Heater Located in a Confined Space - applies to Model UDAP and Model UDAP-CV

FIGURE 5 - Definition of Confined Space and Required Openings for Combustion Air


This heater must be supplied with the air that enters into the combustion process and is then vented to the outdoors. Sufficient air must enter the equipment location to replace that exhausted through the heater vent system. In the past, the infiltration of outside air assumed in heat loss calculations (one air change per hour) was assumed to be sufficient. However, current construction methods using more insulation, vapor barriers, tighter fitting and gasketed doors and windows, weather-stripping, and/or mechanical exhaust fans may now require the introduction of outside air through wall openings or ducts.

The requirements for combustion and ventilation air depend upon whether the unit is located in a confined or unconfined space. An "unconfined space" is defined as a space whose volume is not less than 50 cubic feet per 1000 BTUH of the installed appliance. **Under ALL conditions**, enough air must be provided to ensure there will not be a negative pressure condition within the equipment room or space.

WARNING: Model UDAP and UDAP-CV power-vented unit heaters are designed to take combustion air from the space in which the unit is installed and are not designed for connection to outside combustion air intake ducts. Connecting outside air ducts voids the warranty and could cause hazardous operation. See Hazard Levels, page 2.

Do not install a unit in a confined space without providing wall openings leading to and from the space. Provide openings near the floor and ceiling for ventilation and air for combustion as shown in **FIGURE 5**, depending on the combustion air source as noted in Items 1, 2, and 3 below.

Add total BTUH of all appliances in the confined space and divide by figures below for square inch free area size of each (top and bottom) opening.

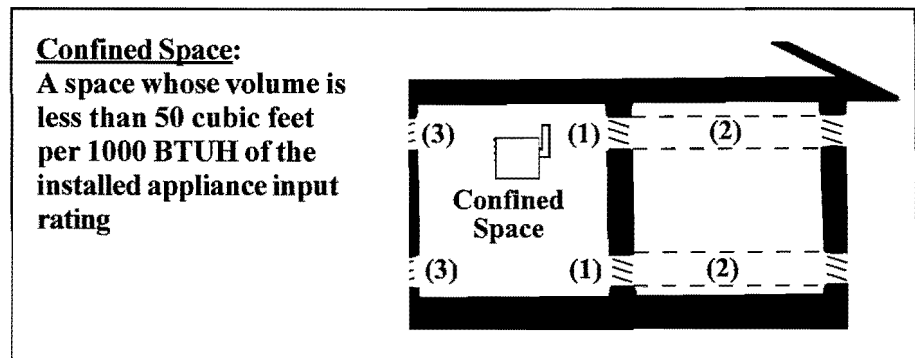

1. **Air from inside the building** -- openings 1 square inch free area per 1000 BTUH. Never less than 100 square inches free area for each opening. See (1) in **FIGURE 5**.

2. **Air from outside through duct** -- openings 1 square inch free area per 2000 BTUH. See (2) in **FIGURE 5**.

3. **Air direct from outside** -- openings 1 square inch free area per 4000 BTUH. See (3) in **FIGURE 5**.

NOTE: For further details on supplying combustion air to a confined space, see the National Fuel Gas Code ANSI Z223.1a (latest edition).


10. Unit Heater Location

Heater Throw

FIGURE 6 - Throw for Fan Models UDAP and UDAS

NOTE: Throws listed are with standard adjustable horizontal louvers at the angles listed (angle is relative to the top of the heater). Throw pattern changes with the addition of optional vertical louvers and/or downturn nozzles.

Use the sound data in Paragraph 6, clearances in Paragraph 8; the combustion air requirements in Paragraph 9; the throw tables, mounting height requirements, and location recommendations below; the weights in Paragraph 11; and the venting requirements in the Venting Manual to determine where to suspend the heater.

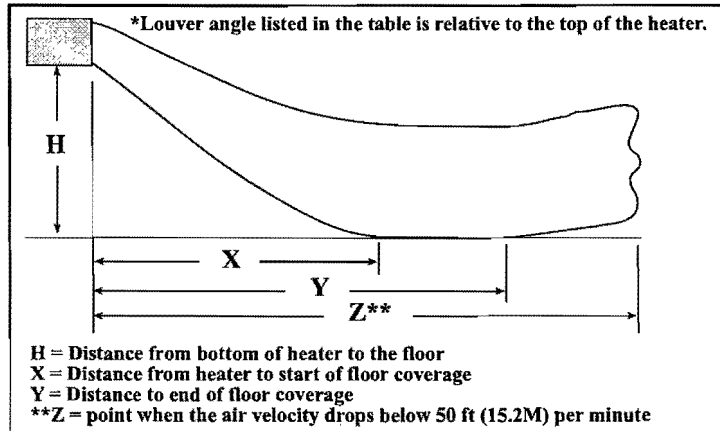

Dimensions X, Y, and Z (feet) Model UDAP and Model UDAS with Standard Horizontal Louvers at Mounting Heights of 5 - 18 ft

H	30				45				60				75				100				125			
	X	Y	Z	Louver Angle*	X	Y	Z	Louver Angle*	X	Y	Z	Louver Angle*	X	Y	Z	Louver Angle*	X	Y	Z	Louver Angle*	X	Y	Z	Louver Angle*
5 ft	6	14	30	-21°	7	16	40	-20°	8	18	45	-16°	9	20	57	-14°	9	20	59	-18°	10	22	65	-14°
8 ft	7	13	26	-39°	9	16	37	-34°	10	18	42	-29°	12	22	54	-25°	11	21	56	-28°	12	23	63	-24°
10 ft	6	11	22	-52°	9	15	33	-43°	10	17	39	-37°	12	22	52	-32°	12	20	52	-36°	13	24	60	-30°
12 ft	-	-	-	-	8	12	27	-55°	10	16	34	-46°	12	21	48	-39°	11	19	47	-44°	14	23	57	-36°
14 ft	-	-	-	-	-	-	-	-	9	14	29	-56°	12	19	44	-46°	11	17	42	-51°	14	22	53	-43°
16 ft	-	-	-	-	-	-	-	-	-	-	-	-	11	17	38	-54°	10	14	34	-58°	13	20	47	-50°
18 ft	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	11	17	40	-57°

H	150				175				200				225				250				300				350				400			
	X	Y	Z	Louver Angle*	X	Y	Z	Louver Angle*	X	Y	Z	Louver Angle*	X	Y	Z	Louver Angle*	X	Y	Z	Louver Angle*	X	Y	Z	Louver Angle*	X	Y	Z	Louver Angle*				
8 ft	13	24	73	-26°	15	28	90	-22°	16	30	93	-20°	14	27	86	-24°	16	29	93	-21°	15	28	94	-24°	17	31	105	-20°	18	34	113	-17°
10 ft	14	24	69	-32°	17	29	87	-27°	17	31	91	-25°	15	27	82	-30°	17	30	90	-26°	16	28	89	-29°	18	32	103	-25°	20	35	110	-21°
12 ft	14	24	64	-39°	18	29	84	-32°	18	31	88	-30°	16	27	78	-35°	18	30	87	-31°	17	28	85	-34°	19	32	98	-30°	21	36	108	-25°
14 ft	14	22	59	-45°	18	28	79	-37°	19	30	84	-34°	16	26	73	-41°	18	30	83	-36°	17	27	80	-40°	20	32	95	-34°	23	35	105	-29°
16 ft	13	20	53	-51°	18	27	74	-42°	19	29	79	-39°	16	24	67	-47°	19	28	78	-41°	17	25	74	-45°	21	31	90	-38°	23	35	101	-33°
18 ft	11	17	44	-58°	17	26	68	-48°	19	28	74	-44°	14	22	60	-53°	18	27	72	-46°	16	24	66	-51°	20	30	85	-43°	23	35	97	-37°

Dimensions X, Y, and Z (meters) Model UDAP and Model UDAS with Standard Horizontal Louvers at Mounting Heights of 1.5 - 5.5M

H	30				45				60				75				100				125			
	X	Y	Z	Louver Angle*	X	Y	Z	Louver Angle*	X	Y	Z	Louver Angle*	X	Y	Z	Louver Angle*	X	Y	Z	Louver Angle*	X	Y	Z	Louver Angle*
1.5 M	1.8	4.3	9.1	-21°	2.1	4.9	12.2	-20°	2.4	5.5	13.8	-16°	2.7	6.1	17.4	-14°	2.7	6.1	18.0	-18°	3.0	6.7	19.9	-14°
2.4 M	2.1	4.0	7.9	-39°	2.7	4.9	11.3	-34°	3.0	5.5	12.8	-29°	3.7	6.7	16.5	-25°	3.4	6.4	17.1	-28°	3.7	7.0	19.2	-24°
3.0 M	1.8	3.4	6.7	-52°	2.7	4.6	10.0	-43°	3.0	5.2	11.9	-37°	3.7	6.7	15.8	-32°	3.7	6.1	15.8	-36°	4.0	7.3	18.3	-30°
3.7 M	-	-	-	-	2.4	3.7	8.2	-55°	3.0	4.9	10.4	-46°	3.7	6.4	14.6	-39°	3.4	5.8	14.3	-44°	4.3	7.0	17.4	-36°
4.3 M	-	-	-	-	-	-	-	-	2.7	4.3	8.8	-56°	3.7	5.8	13.4	-46°	3.4	5.2	12.8	-51°	4.3	6.7	16.1	-43°
4.9 M	-	-	-	-	-	-	-	-	-	-	-	-	3.4	5.2	11.6	-54°	3.0	4.3	10.4	-58°	4.0	6.1	14.3	-50°
5.5 M	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	3.4	5.2	12.2	-57°

H	150				175				200				225				250				300				350				400			
	X	Y	Z	Louver Angle*	X	Y	Z	Louver Angle*	X	Y	Z	Louver Angle*	X	Y	Z	Louver Angle*	X	Y	Z	Louver Angle*	X	Y	Z	Louver Angle*	X	Y	Z	Louver Angle*				
2.4 M	4.0	7.3	22.3	-26°	4.6	8.5	27.4	-22°	4.9	9.1	28.0	-20°	4.3	8.2	26.2	-24°	4.9	8.8	28.3	-21°	4.6	8.5	28.7	-24°	5.2	9.4	32.0	-20°	5.5	11.3	34.4	-17°
3.0 M	4.3	7.3	21.0	-32°	5.2	8.8	26.6	-27°	5.2	9.4	27.7	-25°	4.6	8.2	25.0	-30°	5.2	9.1	27.4	-26°	4.9	8.5	27.1	-29°	5.5	9.8	31.4	-25°	6.1	10.7	33.5	-21°
3.7 M	4.3	7.3	19.5	-39°	5.5	8.8	25.6	-32°	5.5	9.4	26.8	-30°	4.9	8.2	23.8	-35°	5.5	9.1	26.5	-31°	5.2	8.5	25.9	-34°	5.8	9.8	29.9	-30°	6.4	11.0	32.9	-25°
4.3 M	4.3	6.7	18.0	-45°	5.5	8.5	24.1	-37°	5.8	9.1	25.6	-34°	4.9	7.9	22.3	-41°	5.5	9.1	25.3	-36°	5.2	8.2	24.4	-40°	6.1	9.8	29.0	-34°	7.0	10.7	32.0	-29°
4.9 M	4.0	6.1	16.2	-51°	5.5	8.2	22.6	-42°	5.8	8.8	24.1	-39°	4.9	7.3	20.4	-47°	5.8	8.5	23.8	-41°	5.2	7.6	22.6	-45°	6.4	9.4	27.4	-38°	7.0	10.7	30.8	-33°
5.5 M	3.4	5.2	13.4	-58°	5.2	7.9	20.7	-48°	5.8	8.5	22.6	-44°	4.3	6.7	18.3	-53°	5.5	8.2	21.9	-46°	4.9	7.3	20.1	-51°	6.1	9.1	25.9	-43°	7.0	10.7	26.9	-37°

Location Recommendations

Locate the heater so that it is a minimum of five feet (1.5M) above the floor and in compliance with the clearances in Paragraph 8.

WARNING: If touched, the vent pipe and internal heater surfaces that are accessible from outside the heater will cause burns. Suspend the heater a minimum of 5 feet (1.5M) above the floor.

10. Unit Heater Location (cont'd)

NOTE: Venting requirements may affect location. Consult the Venting Manual for this heater before making final determination.

Hazards of Chlorine - applies to location of Model UDAS heater with regard to combustion air inlet

11. Hanging the Heater

WARNINGS: Check the supporting structure to be used to verify that it has sufficient load carrying capacity to support the weight of the unit. Suspend the heater only from the threaded nut retainers or with a manufacturer provided kit. Do NOT suspend from the heater cabinet.

For best results, the heater should be placed with certain rules in mind. In general, a unit should be located from 8 to 12 feet (2.4-3.7M) above the floor. Units should always be arranged to blow toward or along exposed wall surfaces, if possible. Where two or more units are installed in the same room, a general scheme of air circulation should be maintained for best results.

Suspended heaters are most effective when located as close to the working zone as possible, and this fact should be kept in mind when determining the mounting heights to be used. However, care should be exercised to avoid directing the discharged air directly on the room occupants.

Partitions, columns, counters, or other obstructions should be taken into consideration when locating the unit heater so that a minimum quantity of airflow will be deflected by such obstacles.

When units are located in the center of the space to be heated, the air should be discharged toward the exposed walls. In large areas, units should be located to discharge air along exposed walls with extra units provided to discharge air in toward the center of the area.

At those points where infiltration of cold air is excessive, such as at entrance doors and shipping doors, it is desirable to locate the unit so that it will discharge directly toward the source of cold air from a distance of 15 to 20 feet (4.6-6.1M).

CAUTION: Do not locate the heater where it may be exposed to water spray, rain, or dripping water.

The presence of chlorine vapors in the combustion air of gas-fired heating equipment presents a potential corrosion hazard. Chlorine found usually in the form of freon or degreaser vapors, when exposed to flame will precipitate from the compound, and go into solution with any condensation that is present in the heat exchanger or associated parts. The result is hydrochloric acid which readily attacks all metals including 300 grade stainless steel. Care should be taken to separate these vapors from the combustion process. This may be done by wise location of the unit vent and combustion air terminals with regard to exhausters or prevailing wind directions. Chlorine is heavier than air. Keep these facts in mind when determining installation location of the heater in relation to building exhaust systems.

Before suspending the heater, check the supporting structure to be used to verify that it has sufficient load-carrying capacity to support the weight of the unit.

Model UDAP

Size	30	45	60	75	100	125	150	175, 200	225	250	300	350	400
lbs	54	59	67	72	96	101	172	187	203	215	269	294	306
kg	24	27	30	33	44	46	78	85	92	98	122	133	139

Model UDAS

Size	30	45	60	75	100	125	150	175, 200	225	250	300	350	400
lbs	55	60	68	73	97	102	173	188	204	216	270	295	307
kg	25	27	31	33	44	46	78	85	93	98	122	134	138

When the heater is lifted for suspension, support the bottom of the heater with plywood or other appropriately placed material. If the bottom is not supported, damage could occur. Before hanging, verify that any screws used for holding shipping brackets were re-installed in the cabinet.

The heater is equipped for either two-point or four-point suspension. A 3/8"-16 threaded nut retainer is located at each suspension point. **NOTE: Four-point suspension is required** when installing an optional downturn nozzle. See Dimensions in Paragraph 5 and the illustration in **FIGURE 7A**.


FIGURE 7A - Suspending the Heater with Rods from the Threaded Nut Retainers (either two or four point suspension)

WARNING: Unit must be level for proper operation. Do not place or add additional weight to the suspended heater. Hazard Levels, page 2.


FIGURE 7B - Swivel Connectors to Suspend the Heater from 1" Pipe, Option CK8 (2-pt) or CK10 (4-pt)

FIGURE 8 - Suspending the Heater using Option CK22, Ceiling Suspension Kit (no hanger rods)


FIGURE 9 - Model UDAS - Plug the unused suspension points on the control side of the heater with the 1/2" long screws and flat washers. Find the screws and washers in the literature bag shipped inside the heater.

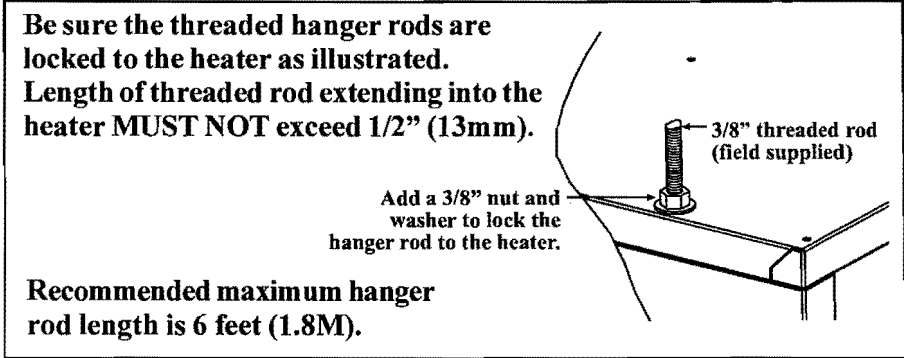


If ordered with swivel connectors for 1" pipe, Option CK8 or CK10, attach the swivels at the threaded nut retainers. Suspend with 1" pipe. (See **FIGURE 7B**.)

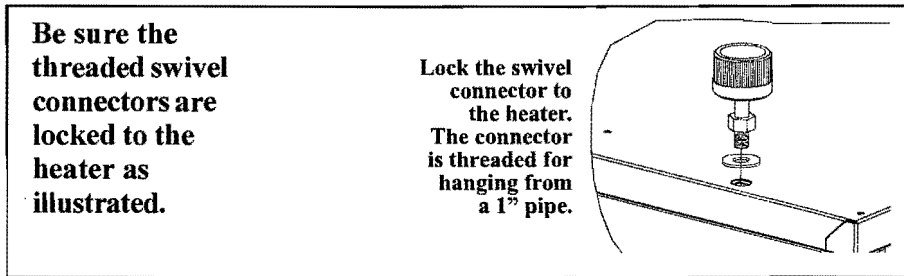

If ordered with a ceiling suspension kit, Option CK22, follow the illustrated instructions in the kit. (See **FIGURE 8**.)

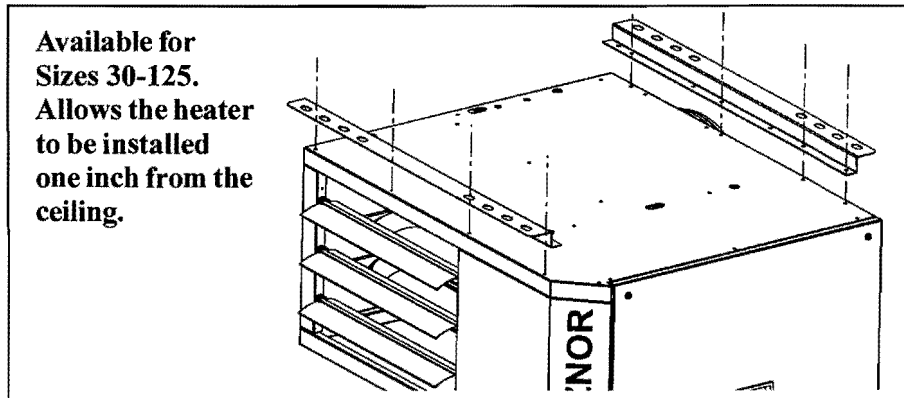

Model UDAS - Whether using the suspension points or the hanger kit, when installing a Model UDAS, the **unused suspension points on the control side of the heater MUST be plugged**. Plug these holes with the 1/2" long cap screws and flat washers shipped in the bag with the heater. (See **FIGURE 9**.)

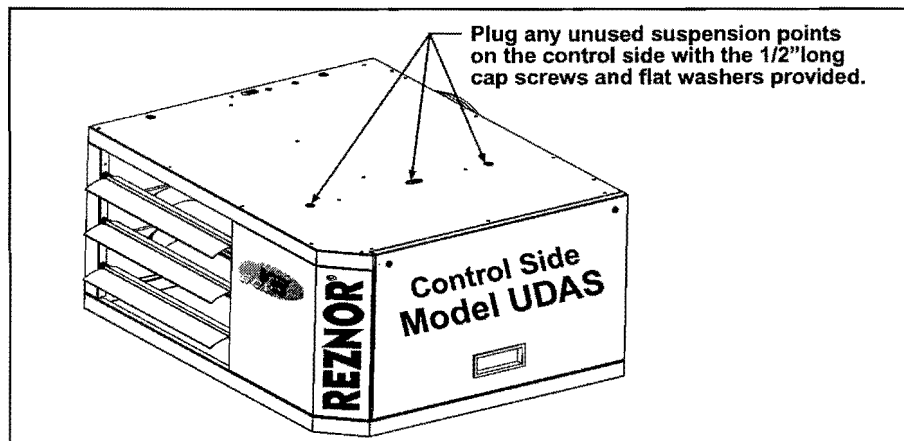

12. Gas Piping and Pressures

WARNING: This appliance is equipped for a maximum gas supply pressure of 1/2 psi, 3.5 kPa, or 14 inches water column. Supply pressure greater than 1/2 psi requires installation of an additional lockup-type service regulator external to the unit.

WARNING: PRESSURE TESTING SUPPLY PIPING

Test Pressures Above 1/2 PSI: Disconnect the heater and manual valve from the gas supply line which is to be tested. Cap or plug the supply line.

Test Pressures Below 1/2 PSI: Before testing, close the manual valve on the heater.

Sizing Gas Supply Line

Capacity of Piping												
Cubic Feet per Hour based on 0.3" w.c. Pressure Drop												
Specific Gravity for Natural Gas -- 0.6 (Natural Gas -- 1000 BTU/Cubic Ft)												
Specific Gravity for Propane Gas -- 1.6 (Propane Gas -- 2550 BTU/Cubic Ft)												
Length of Pipe	Diameter of Pipe											
	1/2"		3/4"		1"		1-1/4"		1-1/2"		2"	
	Natural	Propane	Natural	Propane	Natural	Propane	Natural	Propane	Natural	Propane	Natural	Propane
20'	92	56	190	116	350	214	730	445	1100	671	2100	1281
30'	73	45	152	93	285	174	590	360	890	543	1650	1007
40'	63	38	130	79	245	149	500	305	760	464	1450	885
50'	56	34	115	70	215	131	440	268	670	409	1270	775
60'	50	31	105	64	195	119	400	244	610	372	1105	674
70'	46	28	96	59	180	110	370	226	560	342	1050	641
80'	43	26	90	55	170	104	350	214	530	323	990	604
90'	40	24	84	51	160	98	320	195	490	299	930	567
100'	38	23	79	48	150	92	305	186	460	281	870	531
125'	34	21	72	44	130	79	275	168	410	250	780	476
150'	31	19	64	39	120	73	250	153	380	232	710	433
175'	28	17	59	36	110	67	225	137	350	214	650	397
200'	26	16	55	34	100	61	210	128	320	195	610	372

Note: When sizing supply lines, consider possibilities of future expansion and increased requirements. Refer to National Fuel Gas Code for additional information on line sizing.

WARNING: All components of a gas supply system must be leak tested prior to placing equipment in service. NEVER TEST FOR LEAKS WITH AN OPEN FLAME. Failure to comply could result in personal injury, property damage or death.

All piping must be in accordance with requirements outlined in the National Fuel Gas Code ANSI/Z223.1a (latest edition) or CSA-B149.1 and B149.2 (See Paragraph 2). Gas supply piping installation should conform with good practice and with local codes. Support gas piping with pipe hangers, metal strapping, or other suitable material; do not rely on the heater to support the gas pipe.

The heater is orificed for operation with natural gas having a heating value of 1000 (± 50) BTUH per cubic ft or propane gas with a heating value of 2500 (± 100) BTUH per cubic ft. If the gas at the installation does not meet these specifications, consult the factory for proper orificing.

Pipe joint compounds (pipe dope) shall be resistant to the action of liquefied petroleum gas or any other chemical constituents of the gas being supplied.

Install a ground joint union and manual shutoff valve upstream of the unit control system, as shown in **FIGURE 10**. Installation of a trap with a minimum 3" (76mm) drip leg is required.

Gas Connection Size


The unit is equipped with a nipple that extends outside the cabinet. The gas connection is either 1/2" or 3/4".

Gas Connection (inches)		
Size	Natural	Propane
30, 45, 60, 75, 100, 125, 150, 175, 200	1/2	1/2
225, 250, 300, 350, 400	3/4	3/4

Leak-test all connections by brushing on a leak-detecting solution.

FIGURE 10 - Gas connection is at the pipe nipple that extends outside the cabinet

Illustration shows both a vertical and horizontal gas supply; requirements are the same.

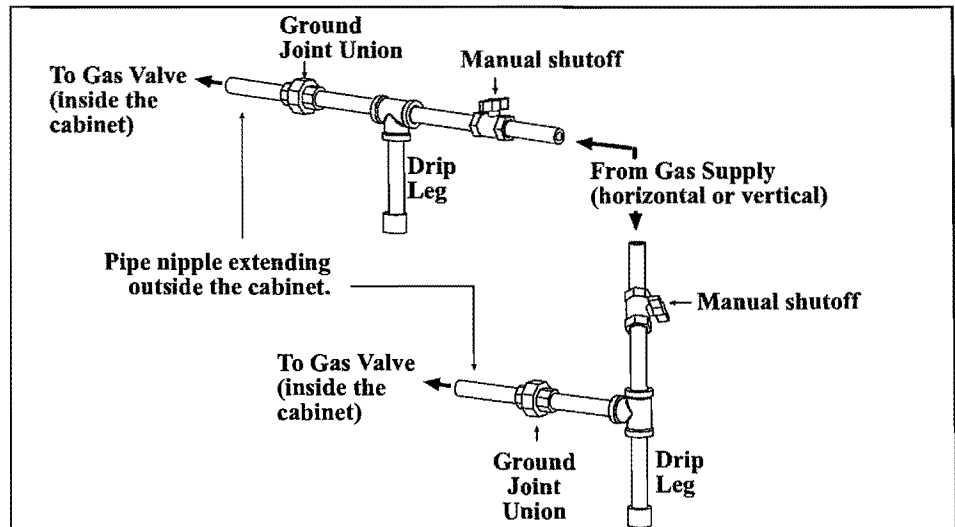

Valve Outlet or Orifice Pressure Setting

NOTE: Gas Conversion Kits are available for changing from propane gas to natural gas or natural gas to propane gas. A factory-authorized conversion kit **MUST** be used.

Check Valve Outlet Pressure (can only be done after heater is operating)

NOTE: If operating at high altitude, outlet pressure requires adjustment. Follow instructions on page 14.

Measuring valve outlet gas pressure cannot be done until the heater is in operation. It is included in the steps of the "Check-Test-Start" procedure in Paragraph 24. The following warnings and instructions apply.

WARNING: Valve outlet gas pressure must never exceed 3.5" w.c. for natural gas and 10" w.c. for propane gas.

For Natural Gas: When the heater leaves the factory, the combination gas valve is set so that the valve outlet gas pressure for a single-stage valve or high fire of a two-stage valve is regulated to 3.5" w.c. Low fire on a two-stage valve is set to 1.8" w.c. Inlet supply pressure to the valve for natural gas must be a minimum of 5" w.c. or as noted on the rating plate and a maximum of 14" w.c.

For Propane Gas: When the heater leaves the factory, the combination gas valve is set so that the valve outlet gas pressure for a single-stage valve or high fire of a two-stage valve is regulated to 10" w.c. Low fire on a two-stage valve is set to 5.0" w.c. Inlet supply pressure to the valve for propane gas must be a minimum of 11" w.c. and a maximum of 14" w.c.

Before attempting to measure or adjust valve outlet gas pressure, the inlet supply pressure *must* be within the specified range both when the heater is in operation and on standby. Incorrect inlet pressure could cause excessive valve outlet gas pressure immediately or at some future time. If natural gas supply pressure is too high, install a regulator in the supply line before it reaches the heater. If natural gas supply pressure is too low, contact your gas supplier.

Instructions

- 1) Locate the 1/8" output pressure tap on the valve (See **FIGURE 11**, page 14). With the manual valve turned off to prevent flow to the gas valve, connect a manometer to the 1/8" pipe outlet pressure tap in the valve. **NOTE:** A manometer (fluid-filled gauge) is recommended rather than a spring type gauge due to the difficulty of maintaining calibration of a spring type gauge.
- 2) Open the manual valve and operate the heater. (**NOTE:** On Model UDAS, depress and hold the door safety switch.) Measure the outlet pressure of the gas valve. To measure low-stage pressure on a unit equipped with a two-stage valve, disconnect the wire from the "HI" terminal on the valve. (Be sure to reconnect the wire.) Normally when operating at sea level, adjustments should not be necessary to the factory setting. (For high altitude settings, see next paragraph.) If adjustment is necessary, remove the cap from the adjustment screw(s). Set pressure to correct settings by turning the regulator screw **IN** (clockwise) to increase pressure. Turn regulator screw **OUT** (counterclockwise) to decrease pressure.


12. Gas Piping and Pressures (cont'd)

Derate by Valve Outlet Pressure Adjustment for High Altitude Operation

This adjustment can only be done after the heater is in operation. High altitude adjustment is included in the startup Steps.

NOTE: If elevation is above 6000 ft (1830M), a high altitude pressure switch is required; see Paragraph 7.

FIGURE 11 - Top View of Valves showing Outlet Pressure Tap and Adjustment Locations

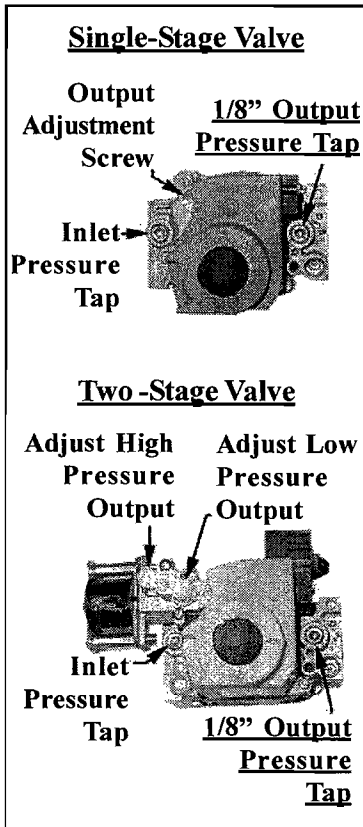

Instructions for High Altitude Derate

1. Determine the required valve outlet pressure for the elevation where the heater will be operating. If unsure of the elevation, contact the local gas supplier.

Valve Outlet Pressure Settings by Elevation

Manifold Pressure Settings by Altitude for the UNITED STATES					
Altitude		Natural Gas (inches w.c.)		Propane Gas (inches w.c.)	
Feet	Meters	Single-Stage and Two-Stage High Fire	Two-Stage Low Fire	Single-Stage and Two-Stage High Fire	Two-Stage Low Fire
0-2000	0-610	3.5	1.8	10.0	5.0
2001-3000	611-915	3.1	1.6	8.8	4.4
3001-4000	916-1220	3.0	1.5	8.5	4.2
4001-5000	1221-1525	2.8	1.5	8.1	4.1
5001-6000	1526-1830	2.7	1.4	7.7	3.9
6001-7000	1831-2135	2.6	1.3	7.4	3.7
7001-8000	2136-2440	2.5	1.3	7.1	3.5
8001-9000	2441-2745	2.4	1.2	6.7	3.4
9001-10000	2746-3045	2.3	1.2	6.7	3.4

Manifold Pressure Settings by Altitude for CANADA					
Altitude		Natural Gas (inches w.c.)		Propane Gas (inches w.c.)	
Feet	Meters	Single-Stage and Two-Stage High Fire	Two-Stage Low Fire	Single-Stage and Two-Stage High Fire	Two-Stage Low Fire
0-2000	0-610	3.5	1.8	10.0	5.0
2001-4500	611-1373	2.8	1.5	8.1	4.1

2. Locate the 1/8" output pressure tap on the valve (See **FIGURE 11**). Turn the knob on the top of the valve to "OFF". Connect a manometer to the 1/8" pipe outlet pressure tap in the valve. Use a water column manometer that is readable to the nearest tenth of an inch.
3. **Single-Stage and Two-Stage High Fire** - Turn the knob on the top of the valve to "ON". Remove the cap from the pressure adjusting screw and adjust the gas train pressure to the pressure selected from the table above. Adjust pressure by turning the regulator screw IN (clockwise) to increase pressure or OUT (counterclockwise) to decrease pressure.
Two-Stage Low Fire - Disconnect the wire from the "HI" terminal on the gas valve and check the low fire pressure. Turn the regulator screw to adjust the low fire outlet pressure to the "Low Fire" pressure selected from the table. Reconnect the wire to the gas valve.
4. Turn up the thermostat. (NOTE: On Model UDAS, depress and hold the door safety switch.) Cycle the burner once or twice to properly seat the adjustment spring in the valve.
Re-check the pressure(s). When the outlet pressure is right for the installation, remove the manometer and replace the cap.
Check for leak at the pressure tap fitting.
5. With the heater operating determine that the inlet pressure to the heater for natural gas is between 5 and 13.5 inches w.c. and for propane between 10 and 13.5 inches w.c. Take this reading as close as possible to the heater (Heaters are equipped with gas valves that have an inlet pressure tap.) If the inlet pressure is not within the specified range, the inlet pressure must be corrected and Steps 3 and 4 repeated.
6. Find the High Altitude Adjustment label in the plastic bag that contained these instructions. Using a permanent marker, fill-in the appropriate information from the tables on page 15. Select a location for the label on the outside of the heater access panel so that it will be conspicuous to anyone operating or servicing the unit. Be sure the surface is clean and dry and adhere the label.

High Altitude Capacity Changes

The input and/or the capacity of the heater changes with the derate. The tables below list inputs and capacities at altitudes from sea level to 10,000 ft (3045M).

BTUH Inputs and Capacities by Altitude in the UNITED STATES for Model UDAP and Model UDAS													
ALTITUDE		Normal Input	Thermal Output Capacity	Minimum Input	Normal Input	Thermal Output Capacity	Minimum Input	Normal Input	Thermal Output Capacity	Minimum Input	Normal Input	Thermal Output Capacity	Minimum Input
Feet	Meters	Size 30			Size 45			Size 60			Size 75		
0-2000	0-610	30000	24600	30000	45000	37350	45000	60000	49800	42000	75000	62250	52500
2001-3000	611-915	28200	23124	28200	42300	35109	42300	56400	46812	39480	70500	58515	49350
3001-4000	916-1220	27600	22632	27600	41400	34362	41400	55200	45816	38640	69000	57270	48300
4001-5000	1221-1525	27000	22140	27000	40500	33615	40500	54000	44820	37800	67500	56025	47250
5001-6000	1526-1830	26400	21648	26400	39600	32868	39600	52800	43824	36960	66000	54780	46200
6001-7000	1831-2135	25800	21156	25800	38700	32121	38700	51600	42828	36120	64500	53535	45150
7001-8000	2136-2440	25200	20664	25200	37800	31374	37800	50400	41832	35280	63000	52290	44100
8001-9000	2441-2745	24600	20172	24600	36900	30627	36900	49200	40836	34440	61500	51045	43050
9001-10000	2746-3045	24000	19680	24000	36000	29880	36000	48000	39840	33600	60000	49800	42000
Feet	Meters	Size 100			Size 125			Size 150			Size 175		
0-2000	0-610	105000	88200	73500	120000	100800	84000	150000	124500	105000	175000	145250	122500
2001-3000	611-915	98700	82908	69090	112800	94752	78960	141000	117030	98700	164500	136535	115150
3001-4000	916-1220	96600	81144	67620	110400	92736	77280	138000	114540	96600	161000	133630	112700
4001-5000	1221-1525	94500	79380	66150	108000	90720	75600	135000	112050	94500	157500	130725	110250
5001-6000	1526-1830	92400	77616	64680	105600	88704	73920	132000	109560	92400	154000	127820	107800
6001-7000	1831-2135	90300	75852	63210	103200	86688	72240	129000	107070	90300	150500	124915	105350
7001-8000	2136-2440	88200	74088	61740	100800	84672	70560	126000	104580	88200	147000	122010	102900
8001-9000	2441-2745	86100	72324	60270	98400	82656	68880	123000	102090	86100	143500	119105	100450
9001-10000	2746-3045	84000	70560	58800	96000	80640	67200	120000	99600	84000	140000	116200	98000
Feet	Meters	Size 200			Size 225			Size 250			Size 300		
0-2000	0-610	200000	166000	140000	225000	186750	157500	250000	207500	175000	300000	249000	210000
2001-3000	611-915	188000	156040	131600	211500	175545	148050	235000	195050	164500	282000	234060	197400
3001-4000	916-1220	184000	152720	128800	207000	171810	144900	230000	190900	161000	276000	229080	193200
4001-5000	1221-1525	180000	149400	126000	202500	168075	141750	225000	186750	157500	270000	224100	189000
5001-6000	1526-1830	176000	146080	123200	198000	164340	138600	220000	182600	154000	264000	219120	184800
6001-7000	1831-2135	172000	142760	120400	193500	160605	135450	215000	178450	150500	258000	214140	180600
7001-8000	2136-2440	168000	139440	117600	189000	156870	132300	210000	174300	147000	252000	209160	176400
8001-9000	2441-2745	164000	136120	114800	184500	153135	129150	205000	170150	143500	246000	204180	172200
9001-10000	2746-3045	160000	132800	112000	180000	149400	126000	200000	166000	140000	240000	199200	168000
Feet	Meters	Size 350			Size 400								
0-2000	0-610	350000	290500	245000	400000	332000	280000						
2001-3000	611-915	329000	273070	230300	376000	312080	263200						
3001-4000	916-1220	322000	267260	225400	368000	305440	257600						
4001-5000	1221-1525	315000	261450	220500	360000	298800	252000						
5001-6000	1526-1830	308000	255640	215600	352000	292160	246400						
6001-7000	1831-2135	301000	249830	210700	344000	285520	240800						
7001-8000	2136-2440	294000	244020	205800	336000	278880	235200						
8001-9000	2441-2745	287000	238210	200900	328000	272240	229600						
9001-10000	2746-3045	280000	232400	196000	320000	265600	224000						

BTUH Inputs and Capacities by Altitude in CANADA for Models UDAP and UDAS													
ALTITUDE		Normal Input	Thermal Output Capacity	Minimum Input	Normal Input	Thermal Output Capacity	Minimum Input	Normal Input	Thermal Output Capacity	Minimum Input	Normal Input	Thermal Output Capacity	Minimum Input
Feet	Meters	Size 30			Size 45			Size 60			Size 75		
0-2000	0-610	30000	24600	30000	45000	37350	45000	60000	49800	42000	75000	62250	52500
2001-4500	611-1373	27000	22140	27000	40500	33615	40500	54000	44820	37800	67500	56025	47250
Feet	Meters	Size 100			Size 125			Size 150			Size 175		
0-2000	0-610	105000	88200	73500	120000	100800	84000	150000	124500	105000	175000	145250	122500
2001-4500	611-1373	94500	79380	66150	108000	90720	75600	135000	113400	94500	157500	132300	110250
Feet	Meters	Size 200			Size 225			Size 250			Size 300		
0-2000	0-610	200000	166000	140000	225000	186750	157500	250000	207500	175000	300000	249000	210000
2001-4500	611-1373	180000	151200	126000	202500	170100	141750	225000	189000	157500	270000	226800	189000
Feet	Meters	Size 350			Size 400								
0-2000	0-610	350000	290500	245000	400000	332000	280000						
2001-4500	611-1373	315000	264600	220500	360000	302400	252000						

13. Burner

This heater has a one-piece TCORE²® burner assembly (U.S. Patent No. 6,889,686) designed to provide controlled flame stability without lifting or flashback with either natural or propane gas.

The burner can be removed as a unit for inspection or service; see Maintenance Section for removal instructions.

14. Electrical Supply and Connections

CAUTION: Route wires so that they do not contact the flue wrapper or venter housing.

CAUTION: If any of the original wire as supplied with the appliance must be replaced, it must be replaced with wiring material having a temperature rating of at least 105°C, except for limit control, flame rollout, and sensor lead wires which must be 150°C. See Hazard Levels, page 2.


FIGURE 12 - Supply Wiring Connections at the Circuit Board (DSI Integrated Control Module)

All electrical wiring and connections, including electrical grounding MUST be made in accordance with the National Electric Code ANSI/NFPA No. 70 (latest edition) or, in Canada, with CSA Standard C22.1. In addition, the installer should be aware of any local ordinances or gas company requirements that might apply.

Check the rating plate on the heater for the supply voltage and current requirements. A dedicated line voltage supply with disconnect switch should be run directly from the main electrical panel to the heater. All external wiring must be within approved conduit and have a minimum temperature rise rating of 60°C. Conduit must be run so as not to interfere with the heater access panel. If the installation requires a stepdown transformer (Option CG), follow the instructions shipped with the option package for attaching the transformer to the heater.

The electrical supply enters at the rear of the heater (See FIGURE 13). Model UDAS includes a built-in disconnect switch (20A @ 115V; 10A @ 230V Rating). Model UDAS supply wiring connects to leads located inside a sealed electrical box. To maintain the sealing feature of the electrical box, always replace the cover plate. Model UDAP supply wiring connects directly to leads on the integrated circuit board.

The circuit board (See FIGURE 12) is located inside on the bottom of the control compartment. The circuit board is polarity sensitive. It is advisable to check the electrical supply to be certain that the black wire is the “hot” wire and that the white wire is the neutral wire. The supply connection made to “L1” on the circuit board must be the “hot” wire.

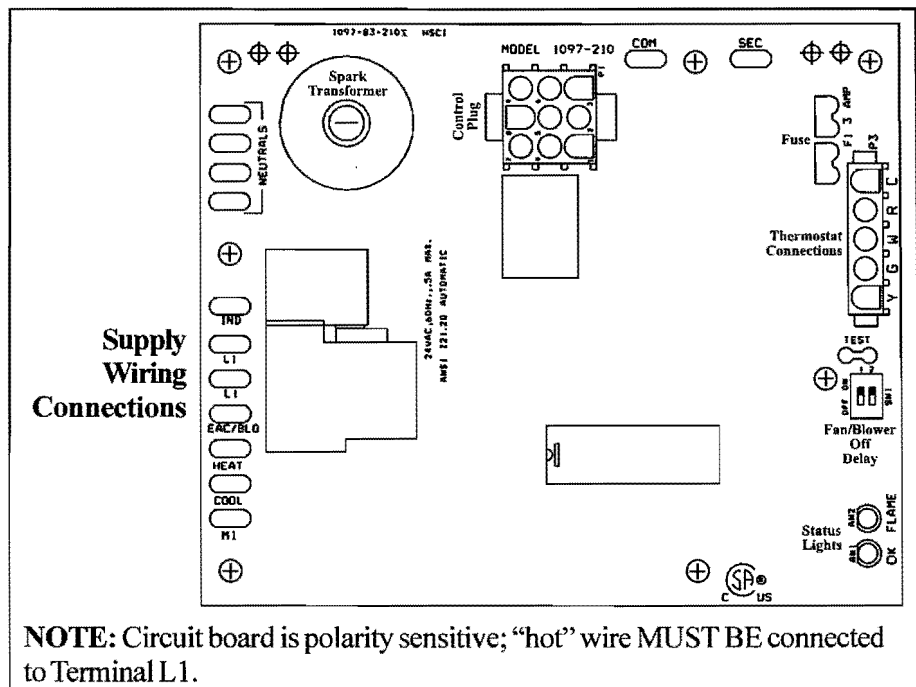


24V Control Wiring Connections

For all models, the terminal strip for 24 volt thermostat connections is located on the outside of the cabinet at the back of the heater (See FIGURE 13). Wires from the terminal strip are factory wired to the circuit board.

FIGURE 13 - Terminal Strip for 24-volt wiring is on the outside rear of the heater.

NOTE: The size of heater illustrated has a vertical terminal strip. Some sizes have a horizontal terminal strip.

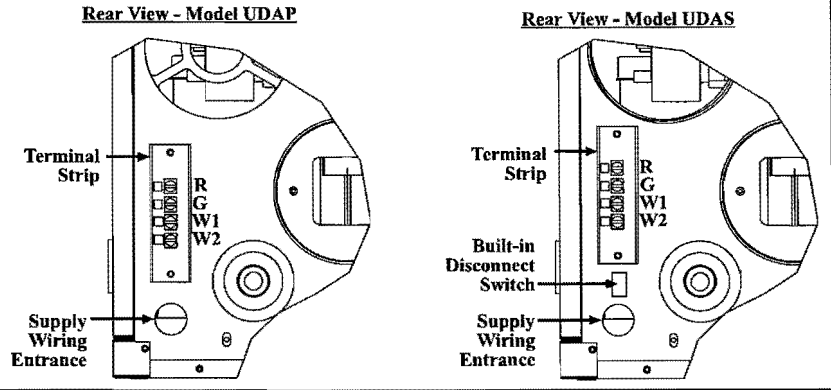

15. Controls

Use either an optional thermostat available with the heater or a field-supplied 24-volt thermostat. Install according to the thermostat manufacturer's instructions, paying particular attention to the requirements regarding the location of the thermostat. Make sure that the heat anticipator setting on the thermostat is 0.6 amps (or in accordance with the amperage value noted on the wiring diagram of your heater).

Make thermostat connections at the terminal strip on the back of the heater. The strip has four terminals, R, G, W1, and W2; refer to the wiring diagram.

IMPORTANT: All units **MUST** be operated by a 24-volt thermostat. Never use a line voltage disconnect switch as a means of operating the heater. Operating Model Sizes 30-125 by means other than a 24-volt thermostat may result in the flame rollout switch tripping.

Unit Mounted Thermostat - Option CM3

If the heater was ordered with Option CM3, a kit for mounting the thermostat on the rear of the heater is shipped separately. Follow the instructions in the option package to attach the bracket.

Select a snap-action thermostat when using the unit mounted thermostat bracket. Do not use a mercury switch thermostat because the vibration may cause excessive unit cycling. Be careful with the thermostat leads; shorting the thermostat wires to a metal surface will cause the transformer to fail.

Multiple Heater Control - Option CL31 and Option CL32


If the heater was ordered with a multiple heater control option, one thermostat can be used to control up to six heaters. The option includes a 40VA transformer that replaces the standard transformer in the "master" unit and a relay assembly that attaches to the "slave" unit. Option CL31 provides for control of two heaters. If control of additional heaters is desired (up to six total), Option CL32 which is the relay assembly only must be added to each of the "slave" heaters.

The option packages are shipped separately and include complete instructions on installation and wiring.

DDC Controls, Options D10 and D14

If the heater was ordered with Option D10 or D14, it is equipped with a Novar® Minio control module. The Novar control with its accompanying relays and power transformer

FIGURE 14A - DDC Control with Transformer and Relays is Mounted on a Specially Designed Bracket in the Control Compartment

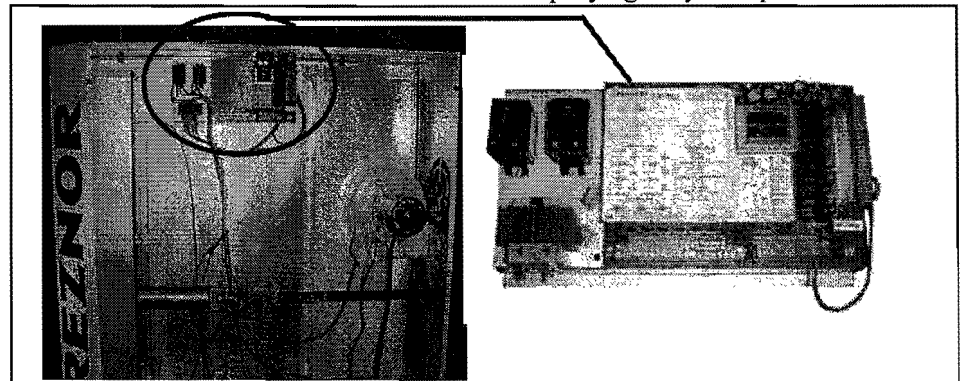

15. Controls (cont'd)


DDC Controls, Options D10 and D14 (cont'd)

are mounted in the control compartment of the unit. See **FIGURE 14A**. This control offers a wide variety of input and output points that can be configured to meet a wide range of building management applications. User-selectable input types are Thermistor, 4-20 milliamp, 1-5 volts, or digital.

Control **Option D10** includes the controller and the sensor to be field mounted at the heater discharge. **Option D14** requires a field-supplied sensor that is compatible with the control. For regulatory compliance specifications, and safety precautions, review the control manufacturer's installation instructions in the owner's envelope.

The recommended location for mounting the sensor is on the side of a field-installed optional downturn nozzle. See **FIGURE 14B** for an illustration of the sensor included with Option D10 and dimensions for mounting it on the nozzle side.

FIGURE 14B - Recommended Location for Mounting the Sensor is on the Side Panel of a Discharge Nozzle (Option CD 2, 3, or 4)

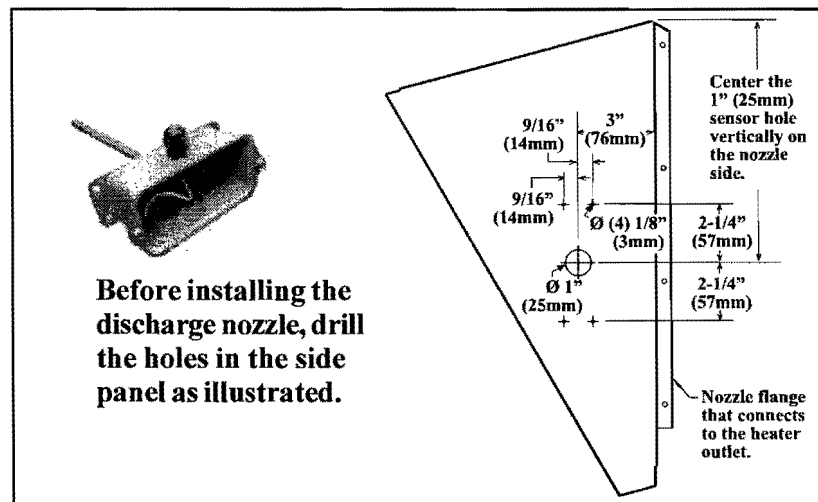

Mount the sensor on the nozzle side.

Drill a 7/8" hole in the cabinet top above the controller and install the bushing supplied with the unit for running the sensor wire. Wire the sensor to the controller as illustrated on the wiring diagram on the heater. Sensor wire is field-supplied.

16. Combustion Air Proving (Pressure) Switch

The combustion air proving switch is a pressure sensitive switch that monitors air pressure to ensure that proper combustion airflow is available. On Model UDAP, the switch is a single pole/normally open device which closes when a negative pressure is sensed in the venter housing. On Model UDAS, the switch senses the differential pressure between the negative pressure in the venter housing and the pressure in the cabinet. (For switch location, see **FIGURE 18**, page 29.)

On startup when the heater is cold, the sensing pressure is at the most negative level, and as the heater and flue system warm up, the sensing pressure becomes less negative. After the system has reached equilibrium (about 20 minutes), the sensing pressure levels off.

If a restriction or excessive flue length or turns cause the sensing pressure to be outside the switch setpoint, the pressure switch will function to shutoff the main burner. The main burner will remain off until the system has cooled and/or the flue system resistance is reduced.

The Tables on the left below list the approximate water column negative pressure readings and switch setpoints for sea level operating conditions for Model UDAP and Model UDAP-CV heaters. The Table on the right lists the approximate water column differential pressure readings and switch setpoints for sea level operating conditions for Model UDAS heaters.

DANGER: Safe operation of this unit requires proper venting flow. NEVER bypass combustion air proving switch or attempt to operate the unit without the venter running and the proper flow in the vent system. Hazardous conditions could result. See Hazard Intensity Levels, page 2.

Pressure Switch Settings

Model UDAP	Startup Cold	Equilibrium Hot	Setpoint OFF	Setpoint ON	Label Color	Switch P/N	Model UDAS	Startup Cold	Equilibrium Hot	Setpoint OFF	Setpoint ON	Label Color	Switch P/N
	Negative Pressure Measured in " w.c.							Differential Pressure Measured in " w.c.					
30	1.00	0.78	0.40	0.58	Green	197030	30	1.00	0.78	0.65	0.83	Yellow	197028
45	0.95	0.75	0.40	0.58	Green	197030	45	1.05	0.80	0.65	0.83	Yellow	197028
60	1.00	0.78	0.50	0.68	Orange	196388	60	1.10	0.85	0.65	0.83	Yellow	197028
75	1.00	0.85	0.50	0.68	Orange	196388	75	1.10	0.85	0.65	0.83	Yellow	197028
100	0.85	0.72	0.50	0.68	Orange	196388	100	0.85	0.72	0.55	0.73	White	196362
125	0.75	0.60	0.40	0.58	Green	197030	125	0.75	0.60	0.45	0.63	Pink	197032
150, 175	0.75	0.65	0.40	0.58	Green	197030	150, 175	0.75	0.60	0.40	0.58	Green	197030
200, 225	2.20	1.50	1.10	1.30	Blue	201158	200, 225	2.20	1.50	1.10	1.30	Blue	201158
250, 300	2.30	1.60	1.10	1.30	Blue	201158	250, 300	2.30	1.60	1.10	1.30	Blue	201158
350, 400	2.60	1.80	1.40	1.60	Red	201159	350, 400	2.60	1.80	1.40	1.60	Red	201159

Model UDAP-CV with Opt AV6	Startup Cold	Equilibrium Hot	Setpoint OFF	Setpoint ON	Label Color	Switch P/N
	Negative Pressure Measured in " w.c.					
30	1.10	0.84	0.65	0.83	Yellow	197028
45	1.10	0.81	0.50	0.68	Orange	196388
60	0.92	0.75	0.60	0.78	Lt Blue	197029
75	0.97	0.78	0.60	0.78	Lt Blue	197029
100	0.88	0.71	0.55	0.73	White	196362

17. Limit Control

All units are equipped with a temperature activated auto reset limit control. The control is factory set and is non-adjustable. If the setpoint is reached, the limit control will interrupt the electric supply to the gas valve. This safety device provides protection in the case of motor failure or lack of airflow due to a restriction at the inlet or outlet. (For location, see FIGURE 18, page 29.)

CAUTION: The auto reset limit control will continue to shut down the heater until the cause is corrected. Never bypass the limit control; hazardous conditions could result. See Hazard Intensity Levels, page 2.

18. Flame Rollout Switch - Sizes 30-125 only

Sizes 30-125 are equipped with a temperature activated manually reset flame rollout switch. The flame rollout switch is located at the top of the burner assembly. It is factory set and is non-adjustable. If the setpoint is reached, the flame rollout acts to interrupt the electric supply to the gas valve. If the flame rollout switch activates, identify and correct the cause before resetting the switch. Refer to the Maintenance Section for information on probable causes and instructions on resetting the flame rollout switch. (For location, see FIGURE 18, page 29.)

DANGER: If the manual reset flame rollout switch activates, identify and correct the cause before resetting the switch. Never bypass the flame rollout switch; hazardous conditions could result. See Hazard Intensity Levels, page 2.


19. Door Switch - Model UDAS only

All sizes of Model UDAS heaters are equipped with a door switch which prevents the heater from operating when the service door panel is open. The service panel of a Model UDAS is equipped with a pliable gasket material that fully seals the door to provide added protection from building air entering the combustion zone of the heater. (For switch location, see FIGURE 18, page 29.)

20. Ignition System

This heater is equipped with a direct spark integrated control module (circuit board). The module monitors the safety devices and controls the operation of the fan and venter motors and the gas valve between heat cycles.

FIGURE 15 – DSI Integrated Control Module (circuit board)

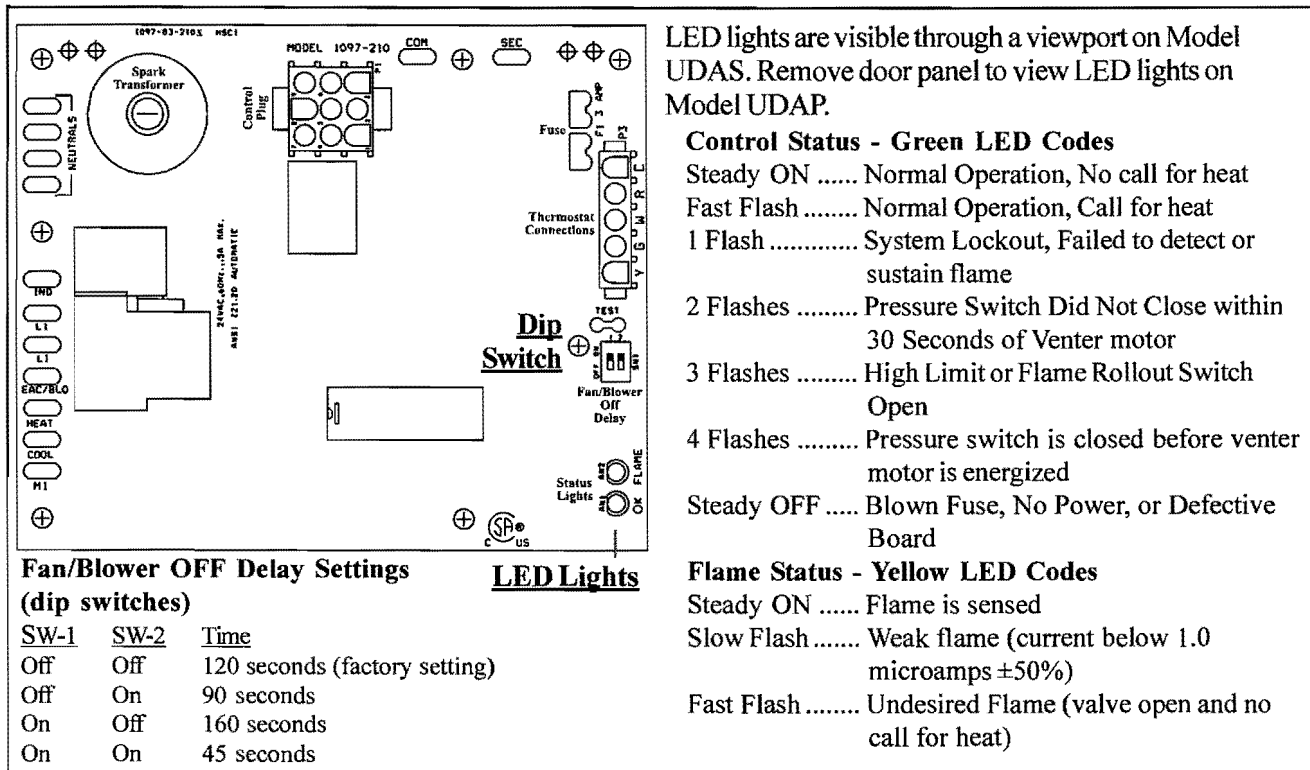

Normal Heat Cycle Operating Sequence

1) **Call for Heat** - The thermostat calls for heat by energizing the “W” terminal. The control checks to see that the limit switch is closed and the pressure switch is open. If the limit switch is open, the control responds as defined in the “Abnormal Heat Cycle, Limit Switch Operation”. If the pressure switch is closed, the control will do four flashes on the green LED and wait indefinitely for the pressure switch to open. If the pressure switch is open, the control proceeds to prepurge.

2) **Prepurge** - The control energizes the venter motor and waits for the pressure switch to close. If the pressure switch does not close within 30 seconds of the venter motor energizing, the control will do two flashes on the green LED. The control will leave the venter motor energized indefinitely as long as the call for heat remains and the pressure switch is open.

When the pressure switch is proven closed, the control begins the prepurge time. If flame is present any time while in prepurge, the prepurge time is restarted. If flame is present long enough to cause lockout, the control responds as defined in “Fault Modes, Undesired Flame”.

The control runs the venter motor for a 20 second prepurge time, then proceeds to the ignition trial period.

3) **Ignition Trial Period** - The control energizes the spark and main gas valve. The venter remains energized. If flame is sensed during the first 16 seconds, the spark is de-energized and the control proceeds to heat fan/blower on delay. If flame has not been sensed during the first 16 seconds, the control de-energizes the spark output and keeps the gas valve energized for an additional one second flame proving period. If flame is not present after the flame proving period, the control de-energizes the gas valve and proceeds with ignition re-tries as specified in “Abnormal Heat Cycle, Ignition Retry”. If flame is present, the control proceeds to the fan/blower on delay.

Normal Heat Cycle Operating Sequence (cont'd)

LED lights are visible through viewport on Model UDAS. Remove door panel to view LED lights on Model UDAP.

4) Fan/Blower On Delay - The control waits for 30 seconds from the time the gas valve opened and then energizes the fan/blower motor. The gas valve and venter motor remain energized. The control proceeds to steady heat mode.

5) Steady Heat - Control inputs are continuously monitored to ensure limit and pressure switches are closed, flame is established, and the thermostat call for heat remains. When the thermostat call for heat is removed, the control de-energizes the gas valve and begins post-purge and fan/blower off delay timing.

6) Post Purge - The venter motor output remains on for a 45-second post-purge period after the thermostat is satisfied.

7) Fan/Blower Off Delay - The fan/blower motor is de-energized after a blower off delay as selected by the dip switches. Timing begins when the thermostat is satisfied. Delay times are as follows:

SW1	SW2	Time
OFF	OFF	120 seconds (default when shipped)
OFF	ON	90 seconds
ON	OFF	160 seconds
ON	ON	45 seconds

Abnormal Heat Cycle Functions

Interrupted Thermostat Call for Heat - If the thermostat demand for heat is removed before the flame is recognized, the control will run the venter motor for the post purge period and de-energize all outputs.

If the thermostat demand for heat is removed after successful ignition, the control will de-energize the gas valve, run the venter motor through post purge, and run the fan/blower motor on heat speed for the selected delay off time.

Ignition Retry - If flame is not established on the first trial for ignition period, the control de-energizes the gas valve and the venter motor remains energized for an inter-purge period of 10 seconds. The spark and gas valve are then re-energized, and the control initiates another trial for ignition.

If flame is not established on the second trial for ignition, the control de-energizes the gas valve, energizes the fan/blower motor on heat speed, and venter motor remains energized. The fan/blower motor is shut off after the longest selectable fan delay time (160 seconds). When the fan/blower motor de-energizes, the spark and gas valve are re-energized and the control initiates another trial for ignition. (This fan delay is self-healing feature for an open auxiliary limit switch).

If flame is not established on the third trial for ignition period, the control de-energizes the gas valve, and the venter motor remains energized for an inter-purge period of 10 seconds. The control then re-energizes the gas valve and spark and initiates another trial for ignition.

If flame is not established on the fourth trial for ignition (initial try plus 3 re-tries), the control de-energizes the gas valve and goes into lockout. The control goes to one flash on the green LED to indicate ignition failure lockout.

Limit Switch Operation - The limit switch is ignored unless a call for heat is present (W energized). If the limit switch is open and a call for heat is present, the control de-energizes the gas valve and turns the fan/blower motor on heat speed and runs the venter motor.

When the switch re-closes or the call for heat is lost, the control runs the venter motor through post purge and runs the blower/fan motor through the selected fan off delay. The control will return to normal operation after fan off delay is completed.

Pressure Switch - If the pressure switch opens before the trial for ignition period, the venter motor will run through the pressure switch recognition delay (2 seconds), the gas valve will be de-energized, and the venter motor will run through the postpurge time. The control will re-start the heat cycle at the pressure switch proving state if the call for heat still exists.

20. Ignition System (cont'd)

Abnormal Heat Cycle Functions (cont'd)

Continuous Fan Operation

Fault Modes

Lockout

21. Fan Motor

Pressure switch opening for less than 2 seconds during the trial for ignition period shall not interrupt the heat cycle. (Gas valve will de-energize while the pressure switch is open.)

If the pressure switch opens after a successful ignition, the control will de-energize the gas valve. If flame is lost before the end of the 2 second pressure switch recognition delay, the control will respond to the loss of flame. If the pressure switch remains open for 2 seconds and the flame remains, the control de-energizes the gas valve, the venter motor runs through post-purge, and the fan/blower motor runs on heat speed through the selected fan off delay. When the fan off delay is over, the fan/blower motor is de-energized, and a heat cycle is begun if the call for heat still exists.

When the thermostat calls for continuous fan (G) without a call for heat, the fan motor is energized after a .25 second delay. NOTE: This brief on delay is to allow the "G" terminal to energize slightly before "Y" and an external changeover relay to switch from "G" to "W" without causing momentary glitches in the fan/blower output. The fan remains energized as long as the call for fan remains without a call for heat.

If a call for heat (W) occurs during continuous fan, the fan/blower will de-energize.

A call for fan is ignored while in lockout.

Undesired Flame - If flame is sensed longer than 20 seconds while the gas valve is de-energized, the control shall energize the venter motor and fan/blower motor on heat speed. When flame is no longer sensed, the venter motor will run through postpurge, and the fan/blower motor will run through the selected heat fan off delay time. The control will do a soft lockout, but will still respond to open limit and flame. The FLAME (yellow) LED shall flash rapidly when lockout is due to undesired flame.

Gas Valve Relay Fault - If the control senses the gas valve as energized for more than one second when the control is not attempting to energize the gas valve, or the gas valve is sensed as not energized when it is supposed to be energized, then the control will lockout with green LED off. The control assumes either the contacts of the relay driving the gas valve have welded shut, or the sensing circuit has failed. The venter motor is forced off to open the pressure switch to stop gas flow unless flame is present.

If the gas valve was sensed as closed when it should be open, and has not de-energized after the venter motor was shutoff for 15 seconds, then the venter motor is re-energized to vent the unburned gas.

Soft Lockout - The control shall not initiate a call for heat or call for continuous fan while in lockout. The control will still respond to an open limit and undesired flame. Lockout shall automatically reset after one hour. Lockout may be manually reset by removing power from the control for more than one second or removing the thermostat call for heat for more than one and less than 20 seconds.

Hard Lockout - If the control detects a fault on the control board, the status LED will be de-energized, and the control will lockout as long as the fault remains. A hard lockout will automatically reset if the hardware fault clears.

Power Interruption - During a momentary power interruption or at voltage levels below the minimum operating voltage (line voltage or low voltage) the system will self-recover without lockout when voltage returns to the operating range.

Power interruptions of less than 80mS shall not cause the control to change operating states. Power interruptions greater than 80mS may cause the control to interrupt the current operating cycle and re-start.

The fan motor is equipped with thermal overload protection of the automatic reset type. Should the motor refuse to run, it may be because of improper current characteristics. Make certain that the correct voltage is available at the motor.

NOTE: If the unit is equipped with an optional totally enclosed motor or optional voltage, the horsepower may be larger than the standard motor. Refer to the motor nameplate to verify horsepower.


22. Gas Valve

The main operating gas valve is powered by the 24-volt control circuit through the thermostat and safety controls. The main control valve is of the diaphragm type providing regulated gas flow preset at the factory. (For location, see FIGURE 18, page 29.)

WARNING: The operating valve is the prime safety shutoff. All gas supply lines must be free of dirt or scale before connecting the unit to ensure positive closure. See Hazard Levels, page 2.


23. Wiring Diagrams

FIGURE 16A- Typical Wiring Diagram for Model UDAP or Model UDAS, Single Stage

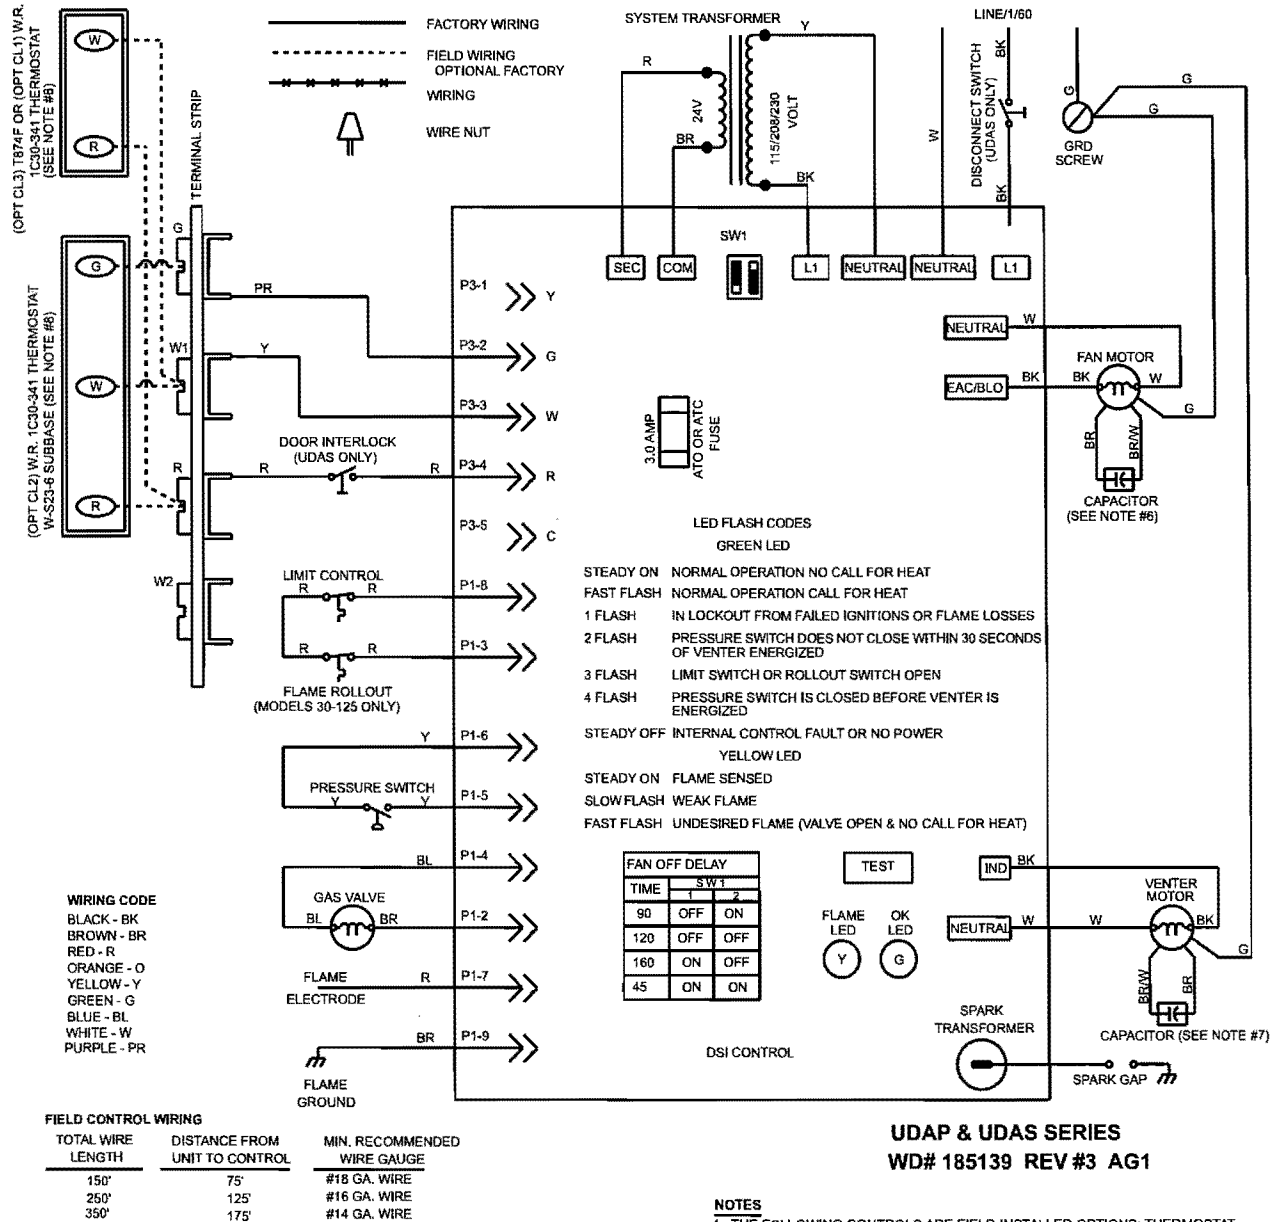

23. Wiring Diagrams (cont'd)


FIGURE 16B - Typical Wiring Diagram for Model UDAP or Model UDAS, Single Stage with Optional Air Recirculation

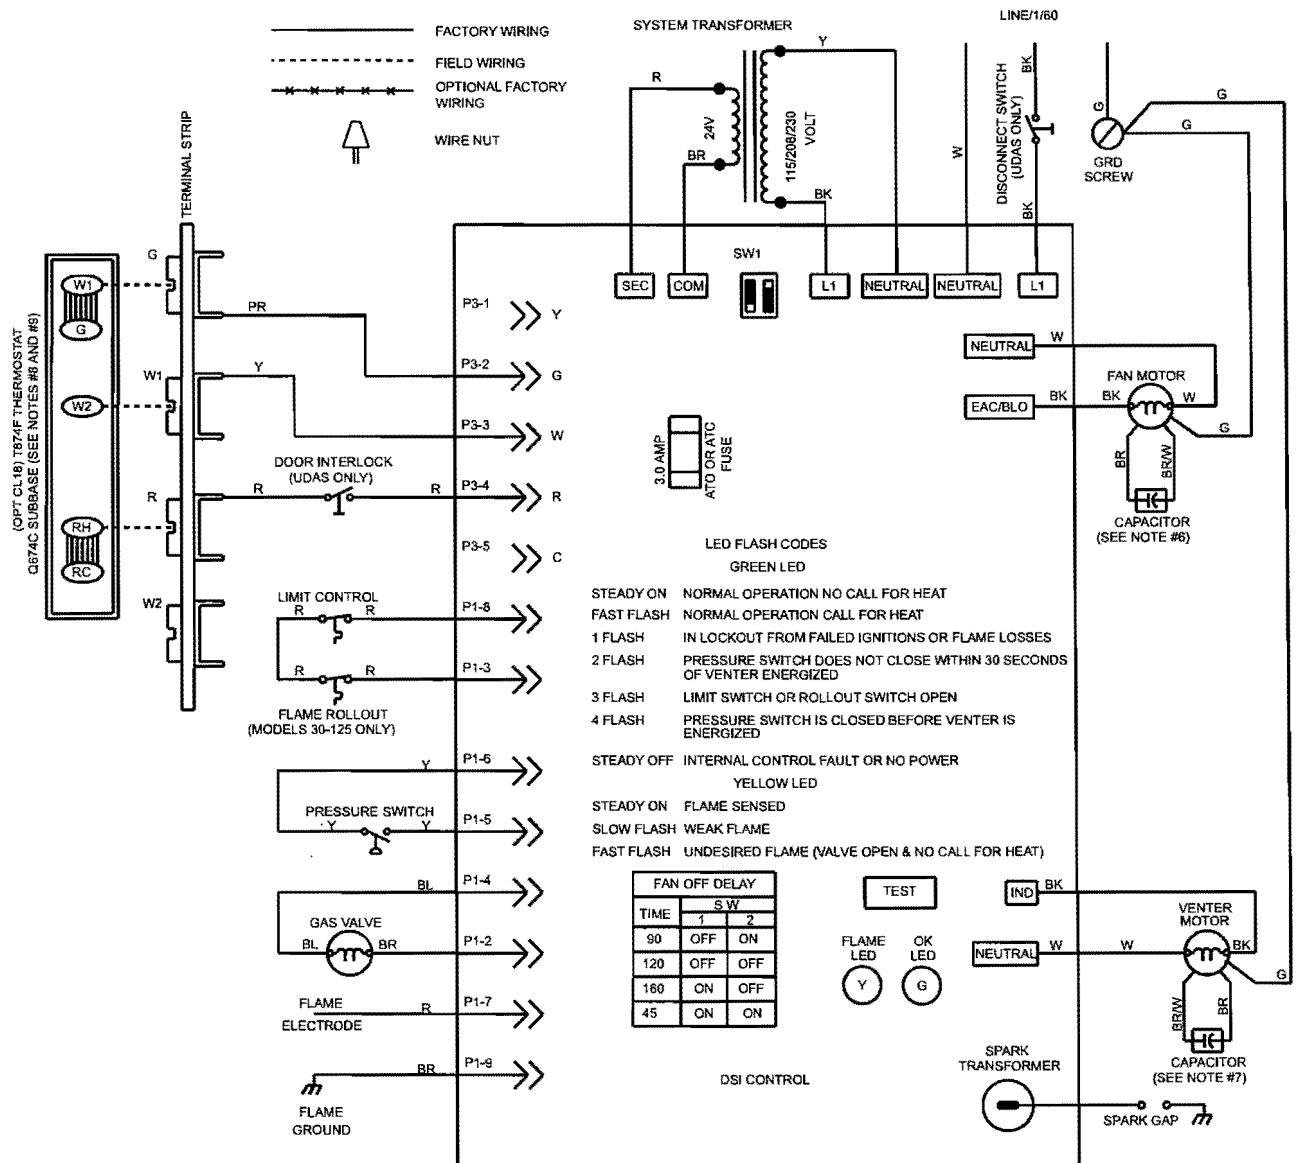

- OPERATING SEQUENCE**
1. SET THERMOSTAT AT LOWEST SETTING, FAN SWITCH AT "AUTO" POSITION.
 2. TURN ON MANUAL GAS VALVE.
 3. TURN ON POWER TO UNIT.
 4. SET THERMOSTAT AT DESIRED SETTING.
 5. LOW STAGE OF THERMOSTAT CALLS FOR HEAT, ENERGIZING THE FAN MOTOR.
 6. HIGH STAGE OF THERMOSTAT CALLS FOR HEAT, ENERGIZING THE VENTER MOTOR.
 7. VENTER PRESSURE SWITCH CLOSSES, FIRING UNIT AT FULL RATE.
 8. SET FAN SWITCH AT "ON" POSITION FOR CONTINUOUS FAN OPERATION.
 9. IF THE FLAME IS EXTINGUISHED DURING MAIN BURNER OPERATION, THE INTEGRATED CONTROL SYSTEM CLOSSES THE MAIN VALVE AND MUST BE RESET BY INTERRUPTING POWER TO THE CONTROL CIRCUIT (SEE LIGHTING INSTRUCTIONS).
- NOTES**
1. THE FOLLOWING CONTROLS ARE FIELD INSTALLED OPTIONS: THERMOSTAT
 2. DOTTED WIRING INSTALLED BY OTHERS.
 3. CAUTION: IF ANY OF THE ORIGINAL WIRING AS SUPPLIED WITH THE APPLIANCE MUST BE REPLACED, IT MUST BE REPLACED WITH WIRING MATERIAL HAVING A TEMPERATURE RATING OF AT LEAST 105° C. EXCEPT FOR SENSOR LEAD WIRE, FLAME ROLLOUT AND LIMIT WIRING WHICH MUST BE 150° C.
 4. USE 18 GA. WIRE FOR ALL WIRING ON THE UNIT.
 5. LINE AND FAN MOTOR BRANCH WIRE SIZES SHOULD BE OF A SIZE TO PREVENT VOLTAGE DROPS BEYOND 5% OF SUPPLY LINE VOLTAGE.
 6. CAPACITOR IS REMOTE MOUNTED AND INCLUDED ONLY ON 115V MODELS 150-400 AND 208/230V MODELS 100-400.
 7. CAPACITOR IS REMOTE MOUNTED AND INCLUDED ONLY ON MODELS 150 - 400.
 8. SET THERMOSTAT SECOND STAGE ANTICIPATOR AT 0.6 AMPS, AND FIRST STAGE ANTICIPATOR AT MINIMUM.
 9. JUMPER THERMOSTAT TERMINALS G TO W1 AND RH TO RC IF FAN CONTROL FROM THERMOSTAT FAN SWITCH IS DESIRED.

UDAP & UDAS SERIES
WD# 185306 REV#4

FIGURE 16C - Typical Wiring Diagram for Model UDAP or Model UDAS, Two Stage Gas Valve

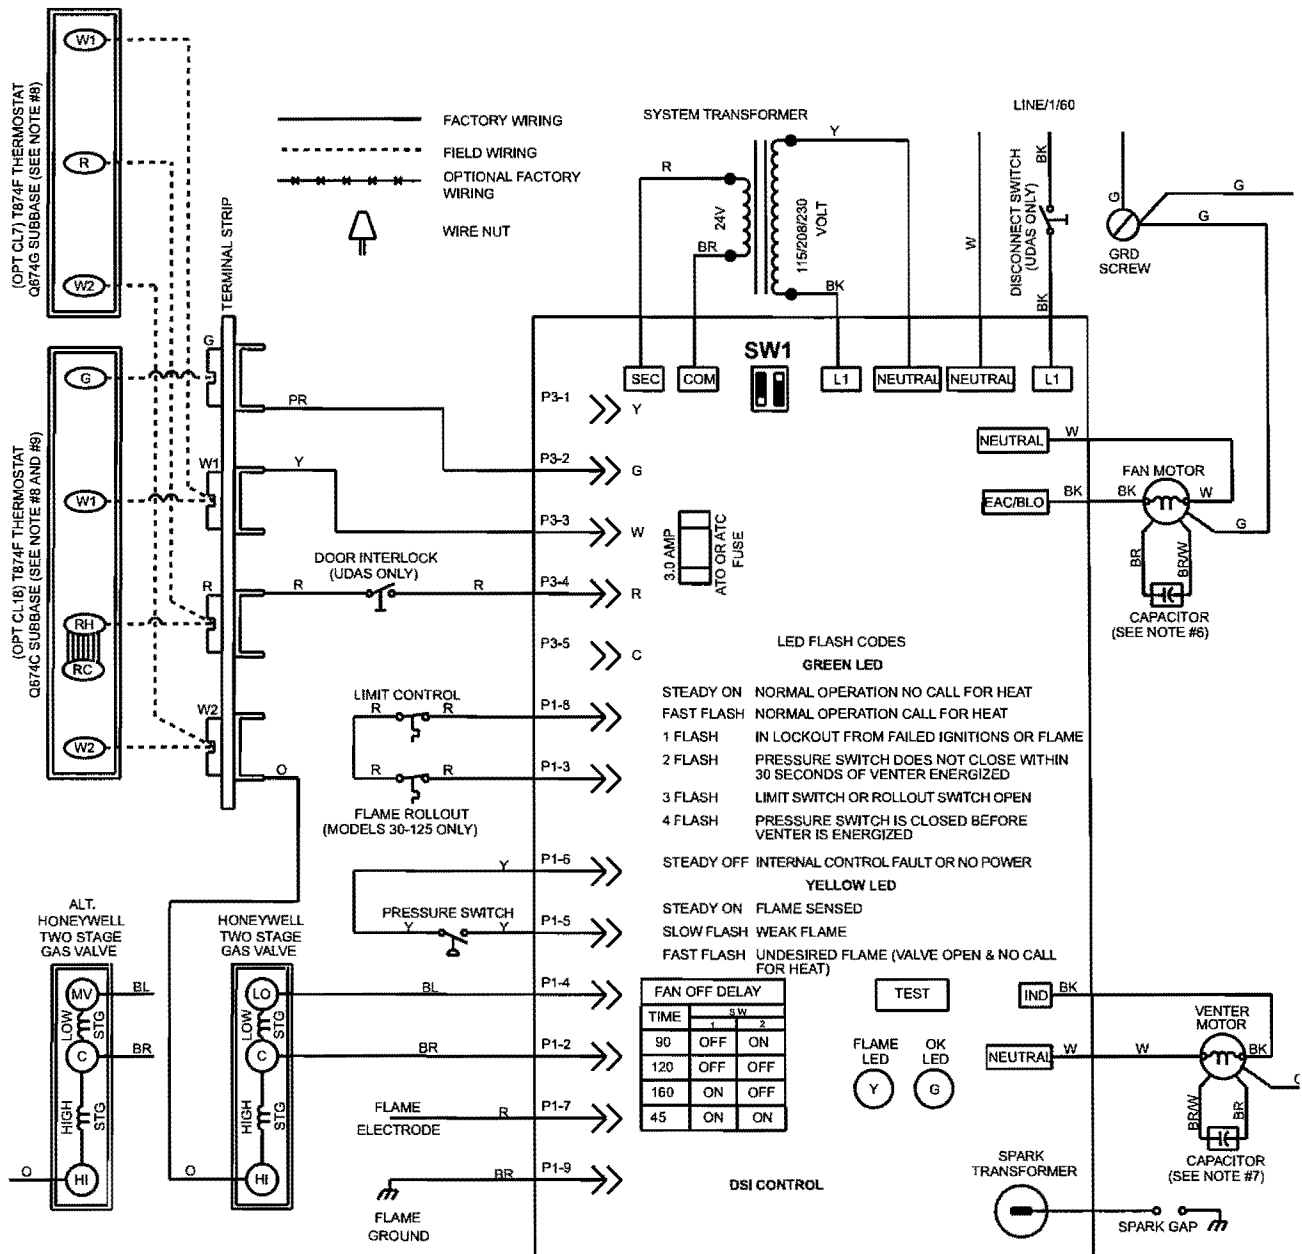

TOTAL WIRE LENGTH	DISTANCE FROM UNIT TO CONTROL	MIN. RECOMMENDED WIRE GAUGE
150'	75'	#18 GA. WIRE
250'	125'	#16 GA. WIRE
350'	175'	#14 GA. WIRE

WIRING CODE

BLACK - BK
 BROWN - BR
 RED - R
 ORANGE - O
 YELLOW - Y
 GREEN - G
 BLUE - BL
 PURPLE - PR
 WHITE - W

UDAP & UDAS
WD# 185244 REV #5 AG2

24. Check Installation and Startup

Check the installation prior to startup:

Heater Startup:

- Check to be sure that all screws used to hold shipping brackets were re-installed in the heater cabinet.
- Check suspension. Unit must be secure and level.
- Check clearances from combustibles. Requirements are in Paragraph 8.
- Check vent system to be sure that it is installed according to the instructions in the appropriate Vent Installation Manual as listed in Paragraph 1.
- Check piping for leaks and proper gas line pressure. Bleed gas lines of trapped air. See Paragraph 12.
- Check electrical wiring. Be sure all wire gauges are as recommended. A service disconnect switch should be used. Verify that fusing or circuit breakers are adequate for the load use.
- Check polarity. Verify that line voltage exists between the black "L1" and earth ground.
- If installed in California, verify that California Warning Label is displayed.

WARNINGS: For your safety, read before operating. If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury, or loss of life.

- This appliance does not have a pilot. It is equipped with an ignition device which automatically lights the burner. Do not try to light the burner by hand.
- Before operating, smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.


WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
 - Do not touch any electrical switch; do not use any phone in your building.
 - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
 - If you cannot reach your gas supplier, call your fire department.
- Use only your hand to turn the gas control ON/OFF knob on the gas valve. Never use tools. If the valve ON/OFF knob will not turn by hand, do not try to repair it. Call a qualified service technician. Force or attempted repair may result in a fire or explosion.
 - Should overheating occur, or the gas supply fail to shut off, turn off the manual gas valve to the appliance before shutting off the electrical supply.
 - Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.

Operating Instructions and Operating Sequence

1. Set thermostat at lowest setting.
2. Turn off all electric power to the appliance.
3. This appliance is equipped with an ignition device which automatically lights the burner. Do not try to light the burner by hand. Open the access door and locate the gas control (ON/OFF) knob on the gas valve. (See FIGURE 17.)
4. Turn the gas control knob clockwise to "OFF".
5. Wait five (5) minutes to clear out any gas. Then smell for gas, including near the floor. **If you smell gas, STOP!** and follow the steps in the **WARNINGS**

FIGURE 17 - Gas Valve ON/OFF Control Knob

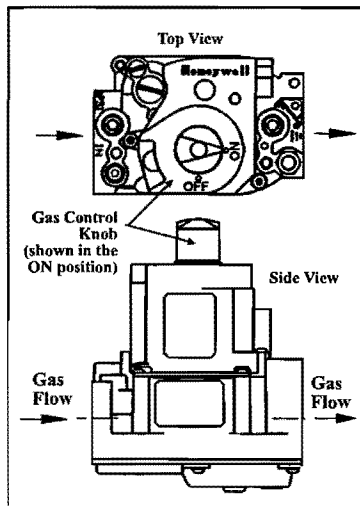

Check installation after startup:

printed above or on the Operating Label on the heater. If you do not smell gas, proceed to the next step.

6. Turn the gas control knob counterclockwise to "ON".
 7. Close the access door.
 8. Turn on the electric power to the heater.
 9. Set the thermostat to the desired setting.
- NOTE:** If the appliance does not operate, follow the instructions "To Turn Off Gas to Appliance" printed below (and on the Operating Label on the heater) and call your service technician.
10. Thermostat calls for heat, energizing the venter motor.
 11. Venter pressure switch closes, firing the unit.
 12. Burner flame is sensed and in 30 seconds after the gas valve is energized, the fan motor is energized.
 13. If the flame is extinguished during the main burner operation, the integrated control system closes the main valve and must be reset by interrupting power to the control circuit. (See lighting instructions on the heater.)

TO TURN OFF GAS TO THE APPLIANCE

- 1) Set thermostat to lowest setting
- 2) If service is to be performed, turn off all electric power to the appliance.
- 3) Open the access door.
- 4) Turn the gas control knob clockwise to "OFF". Do not force.
- 5) Close the access door.

Vent System Testing Procedure - Model UDAP

1. Seal any unused openings in the venting system.
 2. Inspect the venting system for proper size and horizontal pitch, as required in the National Fuel Gas Code, ANSI Z223.1 or CSA B149.1 and B149.2, Installation Code for Gas Burning Appliances and Equipment, and the venting installation manual. Determine that there is no blockage or restriction, leakage, corrosion or other deficiencies that could cause an unsafe condition.
 3. In so far as practical, close all building doors and windows and all doors between the space where the heater is and other spaces of the building. Turn on clothes dryers and exhaust fans, such as range hoods and bathroom exhausts, so they shall operate at maximum speed. Do not operate a summer exhaust fan. Close fireplace dampers.
 4. Light the heater following the lighting instructions. Adjust the thermostat for continued operation. Verify that combustion products are venting properly. After determining that the heater vents properly, return doors, windows, exhaust fans, and fireplace dampers to their previous conditions. If improper venting is observed, the venting system must be corrected.
- With the unit in operation, measure valve outlet gas pressure. If operated at high altitude, adjust outlet gas pressure for altitude. See information and instructions in Paragraph 12.
- Turn the unit off and on, pausing two minutes between each cycle. Observe for smooth ignition.
- Place the "Owner's Envelope" containing the Limited Warranty, this booklet, the venting manual, and any control or optional information in an accessible location near the heater. Follow the instructions on the envelope.

24. Startup (cont'd)

DANGER: The gas burner in this gas-fired equipment is designed and equipped to provide safe controlled complete combustion. However, if the installation does not permit the burner to receive the proper supply of combustion air, complete combustion may not occur. The result is incomplete combustion which produces carbon monoxide, a poisonous gas that can cause death. Safe operation of indirect-fired gas burning equipment requires a properly operating vent system that vents all flue products to the outside atmosphere. FAILURE TO PROVIDE PROPER VENTING WILL RESULT IN A HEALTH HAZARD WHICH COULD CAUSE SERIOUS PERSONAL INJURY OR DEATH.

Always comply with the combustion air requirements in the installation codes and in Paragraph 9. Combustion air at the burner should be regulated only by manufacturer-provided equipment. **NEVER RESTRICT OR OTHERWISE ALTER THE SUPPLY OF COMBUSTION AIR TO ANY HEATER.** Model UDAP units installed in a confined space must be supplied with air for combustion as required by Code and in Paragraph 9 of this heater installation manual. **MAINTAIN THE VENT OR VENT/COMBUSTION AIR SYSTEM IN STRUCTURALLY SOUND AND PROPER OPERATING CONDITION.**

MAINTENANCE AND SERVICE

WARNING: If you turn off the power supply, turn off the gas. See Hazard Levels, page 2.

The material contained in the MAINTENANCE AND SERVICE Section of this manual is designed to aid a qualified service person in maintaining and servicing this equipment. This heater will operate with a minimum of maintenance. To ensure long life and satisfactory performance, a heater that is operated under normal conditions should be inspected and cleaned at the start of each heating season. If the heater is operating in an area where an unusual amount of dust or soot or other impurities are present in the air, more frequent maintenance is recommended.

When any service is completed, be careful to reassemble correctly to ensure that no unsafe conditions are created. When re-lighting, always follow the lighting instructions on the heater.


Maintenance Schedule - The following procedures should be carried out at least annually (See FIGURE 18 and Paragraphs 26-39.):

- Clean all dirt, lint, and grease from the combustion air opening (UDAP) and venter assembly.
- Clean all dirt, lint, and grease from the fan blade, fan guard, and motor.
- Check the heat exchanger both internally and externally.
- Check the burner for scale, dust, or lint accumulation. Clean if needed.
- Check gas valve to ensure that gas flow is being shutoff completely.
- Check the vent or vent/combustion air system for soundness. Clean openings. Replace any parts that do not appear sound.
- Check the wiring for any damaged wire. Replace damaged wiring. (See Paragraph 14 for replacement wiring requirements.)

25. Maintenance Schedule

NOTE: If replacement parts are required, use only factory-authorized parts.

FIGURE 18 - Location of Controls

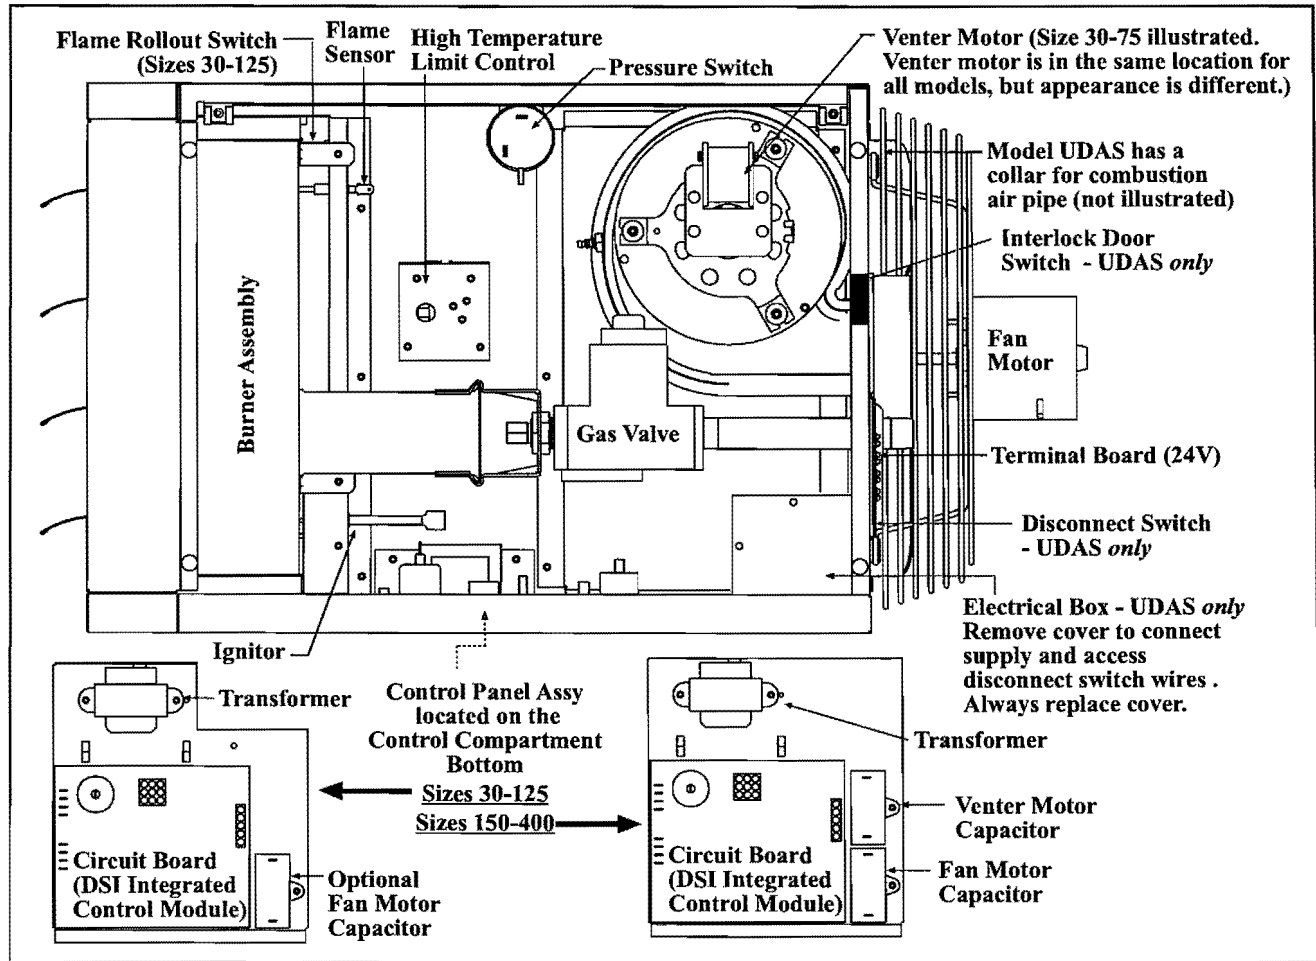

26. Heat Exchanger Maintenance

This heater has a T_{CORE}²® heat exchanger (U.S. Patent No. 6,889,686).

Remove any external dirt or dust accumulation. Visually check the heat exchanger for cracks and holes. If a crack or hole is observed, replace the heat exchanger.

NOTE: Inspection of the lower portion of the heat exchanger is done with the burner removed. See the Burner Service section below for information on inspecting the lower portion of the heat exchanger.

27. Burner Maintenance

This heater is equipped with a T_{CORE}²® burner (U.S. Patent No. 6,889,686).

Inspect the burner/control compartment annually to determine if cleaning is necessary. If there is an accumulation of dirt, dust, and/or lint, clean the compartment and follow the instructions below to remove and clean the burner.

Burner Removal Instructions (Refer to FIGURE 19.)


CAUTION: Use of eye protection is recommended.

1. Outside the cabinet, shut the gas supply off at the manual valve ahead of the union.
2. Turn off electric supply.
3. Disconnect the gas supply at the union outside of the cabinet.
4. Remove the access panel.
5. **Disconnect and Move the Gas Train** - At the gas valve, mark and disconnect the wires. Carefully remove the burner orifice and orifice adapter locking nut. Slide the orifice adapter out through the bracket on the burner pushing the gas train to the right. This will move the gas train out of the way.
6. **Move the Control Assembly** - Remove the two screws holding the control assembly bracket. Being careful not to disconnect any wires, slide the control assembly to the right.

27. Burner Maintenance (cont'd)

Burner Removal (cont'd)

7. Remove Secondary Air Baffles (Sizes 60-400 only) - Vertical along the right side of the burner, locate the flat plate(s) identified as the secondary air baffle(s). The quantity of baffles could be one to four depending on heater size. Each baffle is held in place by one screw. **For re-assembly, on the secondary air shield, mark the location (top and bottom) of each baffle.** Remove all baffles.
8. Remove Burner Assembly
 - a) Locate the burner body supports. Depending on the size, the burner will have two or more supports. At each support, remove the one screw that attaches it to the secondary air shield
 - b) Holding the venturi tube, slide the entire burner assembly slightly to the right to disengage the burner from the supports on the left. Then rotate the open end of the venturi tube inward toward the heater. Carefully pull the burner assembly out of the cabinet.

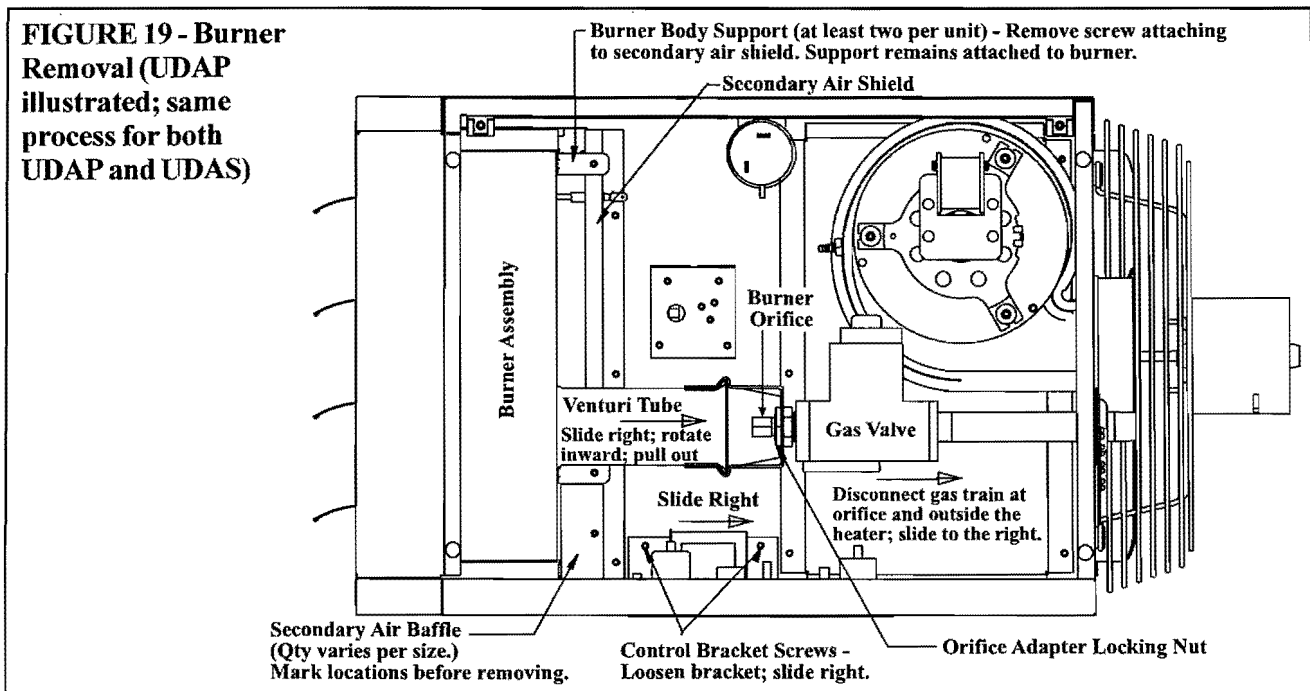

Inspect and Clean the Burner

With the burner assembly removed, shine a flashlight on the burner ribbons. Look for carbon buildup, scale, dust, lint, and/or anything that might restrict flow through the spaces between the burner ribbons. Holding the burner assembly so that any foreign material will fall away from the burner, use a stiff bristle brush to loosen and remove any foreign material(s). If the burner is excessively dirty, remove one of the burner end caps. Remove the four screws that hold the end cap to the burner housing. Lightly tap the end cap to remove it.

Clean all foreign material from the burner and venturi. After the burner is thoroughly clean, replace the end cap making certain that it is tight against the burner housing. **NOTE:** If any of the burner components are damaged or deteriorated, replace the burner assembly.

Inspect the Lower Portion of the Heat Exchanger (with burner assembly removed)

At the burner flame entrance of each tube, shine a bright light into each heat exchanger section. With the light shining into the heat exchanger, observe the outside for visible light. Repeat this procedure with each heat exchanger section. If any light is observed, replace the heat exchanger.

Re-Install the Burner

Instructions to Re-Install the Burner (Refer to FIGURE 19)

1. **Attach the Burner Assembly** - Holding the venturi tube, slide the entire burner assembly into position. Align the supports on the left side with the slots in the burner shield; sliding the supports into the slots. On the right, re-attach each burner body support to the secondary air shield.
2. **Attach the Secondary Air Baffles (Sizes 60-400 only)** - Re-attach the secondary air baffles as marked. Baffles may be different sizes and each **must** be attached in the correct location.
3. **Attach the Control Assembly** - Carefully slide the control assembly into position. Re-attach with the same screws. Check to be sure all wire connections are secure.
4. **Attach the Gas Train** - Slide the gas train so that the orifice adapter is through the bracket. Fasten the gas train to the bracket with the locking nut. Install the gas orifice. Re-connect the wires to the gas valve.
5. Close the access panel.
6. Reconnect the gas supply at the union outside of the cabinet. Leak test the connection with leak detecting solution.
7. Turn on the electric and the gas. Check for proper operation.

28. Burner Orifice

Burner orifice usually only needs to be replaced when installing a gas conversion kit. If ordering a replacement orifice only, give BTUH content and specific gravity of gas, as well as the model and serial number of the unit. When removing or replacing the burner orifice, be careful not to damage the venturi tube and/or the bracket.

29. Ignition System


DSI Integrated Control Module (circuit board) - See FIGURE 20. The module monitors the operation of the heater including ignition. The only replaceable component is the 3 amp Type ATC or ATO fuse. If the fuse is blown, the problem is most likely an external overload. Correct the problem and replace the fuse.

Do not attempt to disassemble the control module. However, each heating season check the lead wires for insulation deterioration and good connections.

Proper operation of the direct spark ignition system requires a minimum flame signal of 1.0 microamps as measured by a microammeter.

FIGURE 20 - DSI Integrated Control Module (Circuit Board)

CAUTION: Due to high voltage on the spark wire and electrode, do not touch when energized. See Hazard Levels, page 2.

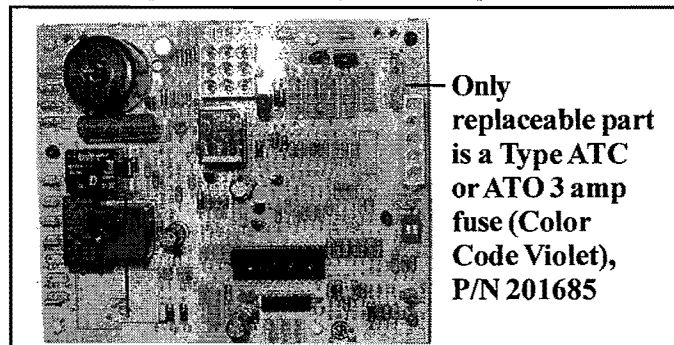


For further information and check out procedure on the direct spark ignition system, refer to Paragraph 20 and the Troubleshooting Flow Chart in Paragraph 40.

Ignitor - Refer to FIGURE 18 and locate the ignitor. Disconnect the wire; remove the screw and the ignitor. Clean the ignitor assembly with an emery cloth.


Spark gap must be maintained to 1/8". See FIGURE 21.

IMPORTANT: When re-assembling, the brown ground wire must remain attached to the ignitor.

FIGURE 21 - Ignitor showing required Spark Gap measurement

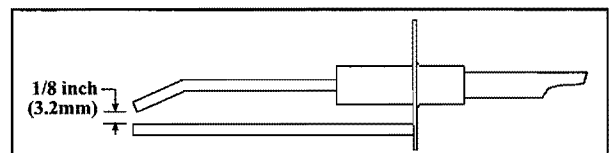

Flame Sensor - Refer to FIGURE 18 and locate the flame sensor. Disconnect the wire; remove the screw and the flame sensor. Clean with an emery cloth.

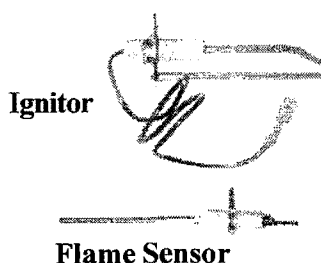


30. Fan Motor, Fan Blades, and Guard

FIGURE 22 - Fan Blade Position on the Shaft

Dimension A

Size	inches	mm
30	1	25
45	9/16	14
60	1-1/2	38
75	2-1/8	54
100	2-3/8	60
125	2-5/16	59
150	2-3/8	60
175	2-1/8	54
200	1-5/8	67
225, 250, 300	2	51
350	1-7/8	48
400	1-3/8	35

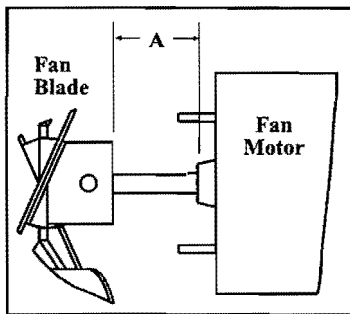

Remove dirt and grease from the motor, the fan guard, and blades. Use care when cleaning the fan blades to prevent causing misalignment or imbalance. Check that the hub of the fan blades is secure to the shaft.

Follow these instructions for replacement of the fan guard, fan motor and/or fan blades.

1. If the heater is installed, turn off the gas and disconnect the electric power.
2. Open the access door and disconnect the fan motor wires, capacitor wires at the capacitor, and ground screw.
3. Remove the assembled parts (the fan guard, the motor and the fan blade).

4. Disassemble and replace whatever parts are needed and reassemble using whatever part(s) are being replaced and the original parts.

Be sure the fan blade is in the proper position on the shaft; refer to the illustration and table in **FIGURE 22**.

Position the assembly on the heater. Attach the fan guard.

Rotate the fan blade to check for adequate clearance. If adjustment is required, loosen the mounting screws, re-position the fan guard, and tighten the screws. Rotate the fan blade and re-check for adequate clearance. Repeat this procedure until the assembly is positioned properly.

5. Reconnect the fan motor wires according to the wiring diagram and close the access panel.
6. Restore power to the heater and turn on the gas. Light, following the instructions on the lighting instruction plate. Check for proper operation.


31. Venter Motor and Wheel

Replacement Instructions

Remove dirt and grease from the motor casing, the venter housing, and the venter wheel. Venter motor bearings are permanently lubricated. Follow these instructions for replacement of the venter motor and wheel assembly. Keep all hardware removed to be used in re-assembling and installing the replacement parts.

1. Turn off the gas and disconnect the electric power.
2. Open the burner/control compartment access panel.
3. Disconnect the three venter motor wires at the DSI control, capacitor wires at the capacitor (if applicable), and ground screw (located on the control panel).
4. Sizes 30 and 45 - Disconnect the gas train and move it out of the way. Disconnect the gas supply at the union outside of the cabinet. At the gas valve, mark and disconnect the wires. Carefully remove the burner orifice and orifice adapter locking nut. Slide the orifice adapter out through the bracket on the burner pushing the gas train to the right. This will move the gas train out of the way.
5. Holding the venter motor, remove the three or four screws that attach the venter motor mounting plate to the venter housing. Remove the motor and wheel assembly from the heater.
6. Re-assemble with the replacement venter motor and wheel assembly. See **FIGURE 23**.

FIGURE 23 - Venter Wheel Position on Shaft

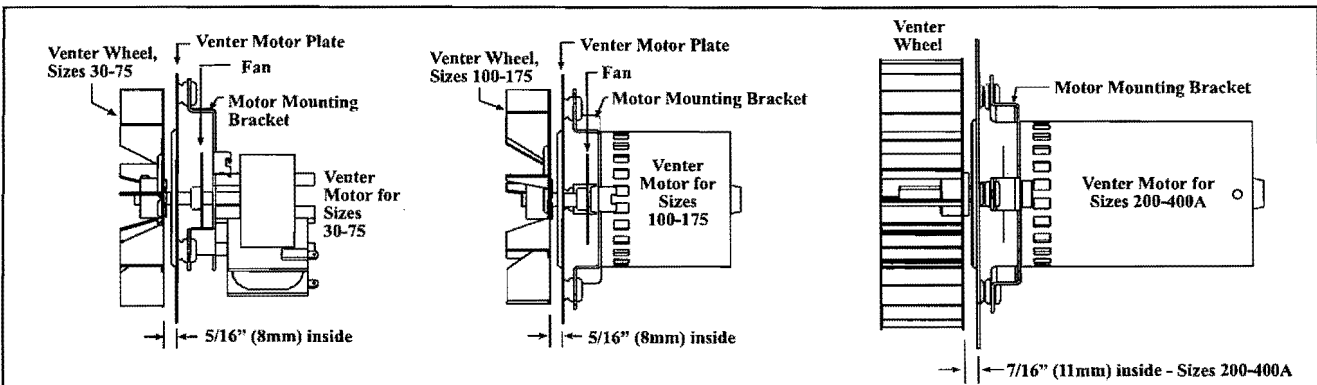

7. Follow the wiring diagram to connect the venter wires.
8. Sizes 30 and 45 - Reconnect the gas supply at the union outside of the cabinet. Leak test the connection with leak detecting solution.
9. Replace the access panel. Restore power to the heater and turn on the gas. Light, following the instructions on the lighting instruction plate. Check for proper operation.

32. Operating Gas Valve

WARNING: The operating valve is the prime safety shutoff. All gas supply lines must be free of dirt or scale before connecting to the unit to ensure positive closure. See Hazard Levels, page 2.


NOTE: Operational pressure settings and instructions for checking pressure settings are in Paragraph 12.

Carefully remove external dirt accumulation and check wiring connections.

The combination gas valve must be checked annually to ensure that the valve is shutting off gas flow completely.


Instructions:

- 1) Locate the 1/8" NPT pressure tap on the combination valve.

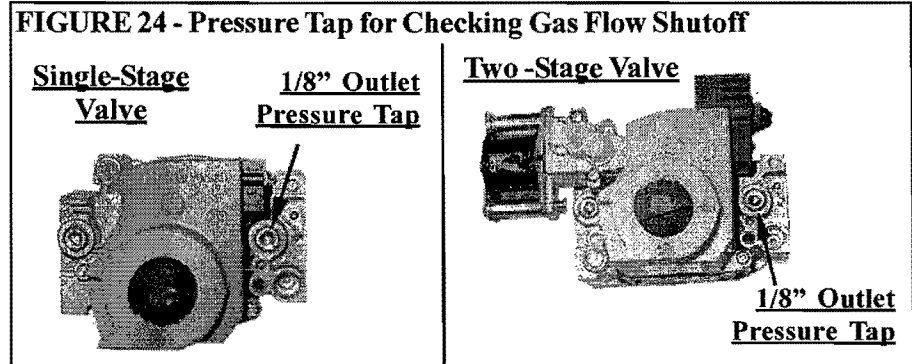

- 2) With the manual valve turned off to prevent flow to the gas valve, connect a manometer to the 1/8" outlet pressure tap in the valve. **NOTE:** A manometer (fluid-filled gauge) is recommended.
- 3) Turn the manual valve to the ON position and the heater OFF. Use your finger to fully block the main burner orifice for several seconds. Observe the manometer with the orifice blocked, and if any pressure is indicated, the gas valve is leaking. **A leaking gas valve must be replaced before the heater is put back in operation.**

33. Combustion Air Pressure Switch

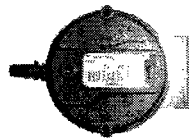

See **FIGURE 18**, page 29, for location. (**NOTE:** Depending on date of manufacture and size, pressure switch may not be in the location indicated. Check the control bracket on the bottom of the compartment or further down on the compartment wall.) If it is determined that the pressure switch needs replacing, use only the factory-authorized replacement part that is designed for the model and size of heater being serviced.

NOTE: A unit operating above 6000 ft (1830M) elevation requires a high altitude pressure switch. See Paragraph 7.

34. Limit Control



If it is determined that the limit control needs replacing, use only a factory-authorized replacement part that is designed for the size of heater. For approximate limit location, see **FIGURE 18**, page 29.

35. Door Switch - UDAS only




If it is determined that the door switch needs replacing, use only a factory-authorized replacement part that is designed for the heater. For approximate switch location, see **FIGURE 18**, page 29.

36. Transformer



See **FIGURE 18**, page 29, for location. Use a voltmeter to verify that there are 24 volts output from the transformer. If the transformer is not functioning, it must be replaced. Use a replacement transformer identical to the factory-installed model.

37. Flame Rollout Switch - Sizes 30-125 only

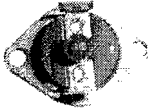

For location, see FIGURE 18, page 29.

The cause of a flame rollout switch activating must be determined. Activation of the manually reset flame rollout switch could be caused by one or more of the following:

- Restricted or plugged heat exchanger
- Too much building exhaust
- Manifold gas pressure too high
- Restricted combustion air inlet or exhaust outlet in combination with a defective pressure switch
- Electrical power interruption during operation
- Unit being operated with a line voltage disconnect (a 24-volt thermostat is required)

If a flame rollout switch trips, inspect the burner/control compartment for signs of excessive heat and burned wiring.

If the compartment appears normal, reset by depressing the red button on the switch. 15 to 20 minutes are required for the switch to cool sufficiently for resetting. A distinct click will be felt when the switch resets. Operate the furnace. If the flame rollout switch trips again, determine and correct the cause before resetting the switch.

If there is damage to the control compartment, repairs must be made before resetting the switch.

If it is determined that the flame rollout switch needs replacing, use only the factory-authorized replacement part that is designed for that size of heater.

38. Disconnect Switch - UDAS only



The disconnect switch is located in the sealed electrical box inside the control compartment with the toggle on the rear of the heater.


If it is determined that the disconnect switch needs replacing, use only the factory-authorized replacement part that is designed for the heater. Always replace electrical box cover.

39. Vent or Vent/Combustion Air System

Check the complete system at least once a year. Inspection should include all joints, seams, concentric adapter box (UDAS), inlet air guard or inlet air cap (UDAS), and the vent terminal cap. Clean openings. Replace any defective parts.

40. Troubleshooting

DSI Integrated Control Module (Circuit Board) Trial Troubleshooting Flowchart

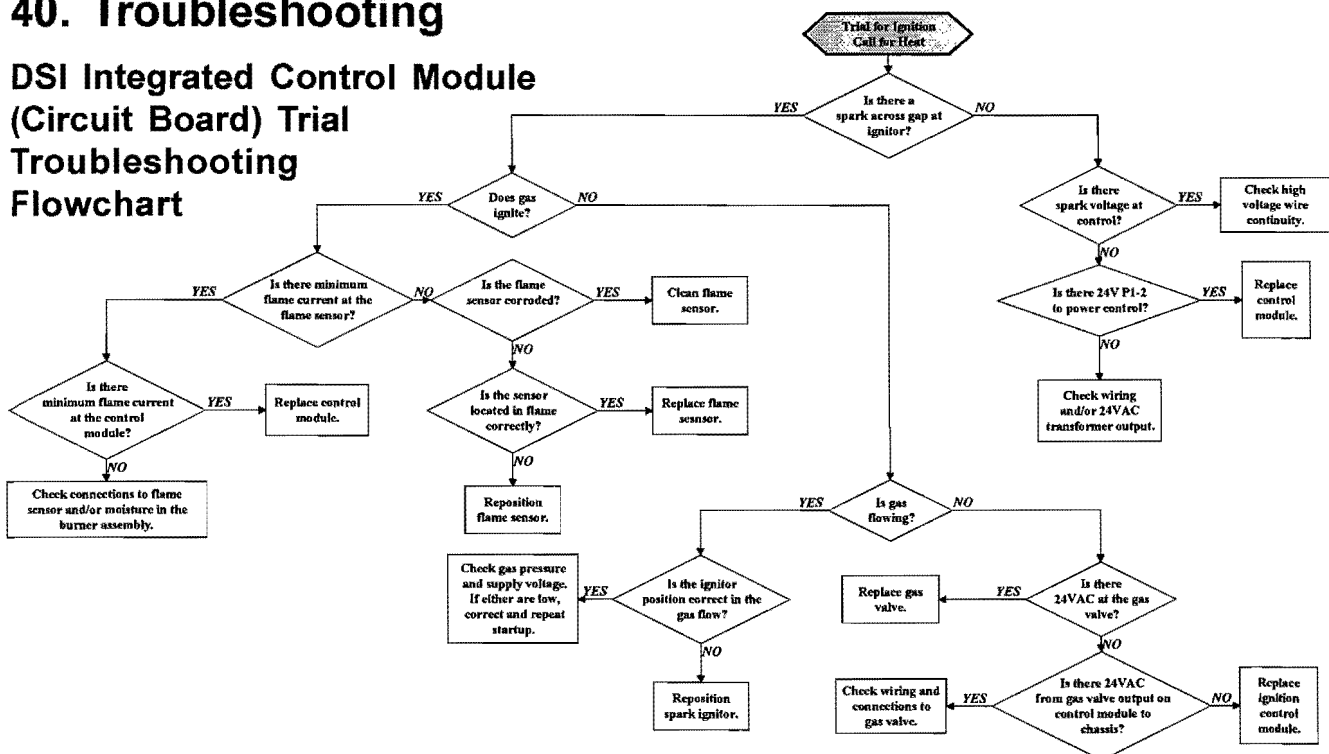

Check the Lights on the DSI Integrated Control Module (Circuit Board)

IMPORTANT: When using a multimeter to troubleshoot the 24 volt circuit, place the meter's test leads into the 5 or 9 pin connectors located on the ignition control. Do not remove connectors or terminals from the electrical components. Doing so can result in misinterpreted readings due to the ignition control board's fault mode monitoring circuits.

The integrated circuit board monitors the operation of the heater and includes two LED signal lights that indicate normal operation and various abnormal conditions. If the heater fails to operate properly, check this signal to determine the cause and/or to eliminate certain causes. LED is visible through viewport on Model UDAS. Remove access panel on Model UDAP. See operating sequence in Paragraph 20.

Do not attempt to repair the DSI integrated control module (circuit board); the only field replaceable component is the fuse.

Control Status - Green LED Codes	
Steady ON .. Normal Operation, No call for heat	4 Flashes Pressure Switch is Closed Before Venter Motor is Energized
Fast Flash ... Normal Operation, Call for heat	Steady OFF .. Blown fuse, No Power, or Defective Board
1 Flash System Lockout, Failed to detect or sustain flame	Flame Status - Yellow LED Codes
2 Flashes Pressure Switch Did Not Close within 30 Seconds of Venter Motor	Steady ON Flame is sensed
3 Flashes High Limit or Flame Rollout Switch Open	Slow Flash Weak flame (current below 1.0 microamps ± 50%)
	Fast Flash Undesired Flame (valve open and no call for heat)

General Troubleshooting

PROBLEM	PROBABLE CAUSE	REMEDY
Venter motor will not start	<ol style="list-style-type: none"> 1. No power to unit. 2. No 24 volt power to integrated circuit board. 3. Integrated circuit board fuse blown. 4. No power to venter motor. 5. Integrated circuit board defective. 6. Defective venter motor. 	<ol style="list-style-type: none"> 1. Turn on power; check supply fuses or main circuit breaker. Turn on built-in disconnect switch (Model UDAS only); replace switch if not operating. 2. Turn up thermostat; check control transformer output. 3. Correct cause. Replace fuse (type ATC or ATO, 32VDC, 3A). 4. Tighten connections at circuit board and/or motor terminals. 5. Replace intergrated circuit board. 6. Replace venter motor. See Paragraph 31.
Burner will not light	<ol style="list-style-type: none"> 1. Manual valve not open. 2. Air in the gas line. 3. Gas pressure too high or too low. 4. No Spark: <ol style="list-style-type: none"> a) Loose wire connections. b) Transformer failure. c) Incorrect spark gap. d) Spark cable shorted to ground. e) Spark electrode shorted to ground. f) Burner not grounded. g) Circuit board not grounded. h.) Unit not properly grounded. i) Integrated circuit board fuse blown. j.) Faulty intergrated circuit board. 5. Lockout device interrupting control circuit by above causes. 6. Interlock door switch open (UDAS only). 7. Combustion air proving switch not closing. 8. Faulty combustion air proving switch. 9. Main valve not operating. <ol style="list-style-type: none"> a) Defective valve. b) Loose wire connections 	<ol style="list-style-type: none"> 1. Open manual valve. 2. Bleed gas line (initial startup only). 3. Supply pressure should be 5" - 14" w.c. for natural gas or 11" - 14" w.c. for propane gas. 4. <ol style="list-style-type: none"> a) Be certain all wire connections are solid. b) Be sure 24 volts is available. c) Maintain spark gap at 1/8" (3.2mm). d) Replace worn or grounded spark cable. e) Replace if ceramic spark electrode is cracked or grounded. f) Make certain integrated circuit board is grounded to ignitor. g) Make certain integrated circuit board is grounded to furnace chassis. h.) Make certain unit is properly field grounded to earth ground and properly phased (L1 to hot lead L2 to neutral). i) Correct cause. Replace fuse (type ATC or ATO, 32VDC, 3A). j) If 24 volt is available to the integrated circuit board and all other causes have been eliminated, replace board. 5. Reset lockout by interrupting control at the thermostat or main power. 6. Close access door or replace switch. 7. <ol style="list-style-type: none"> a) Make sure unit is properly vented. b) Remove obstructions from vent. c) Replace faulty tubing to pressure switch. 8. Replace combustion air proving switch. 9. <ol style="list-style-type: none"> a) If 24 volt is measured at the valve connections and valve remains closed, replace valve. b) Check and tighten all wiring connections.

(continued)

40. Troubleshooting (cont'd)

PROBLEM (cont'd)	PROBABLE CAUSE (cont'd)	REMEDY (cont'd)
Burner will not light (cont'd)	9. Integrated circuit board does not power main valve. a) Loose wire connections. b) Flame sensor grounded. c) Incorrect gas pressure. d) Cracked ceramic at sensor.	9. a) Check and tighten all wiring connections. b) Be certain flame sensor lead is not grounded or insulation or ceramic is not cracked. Replace as required. c) Supply pressure should be 5" - 14" w.c. for natural gas or 11" - 14" w.c. for propane gas. d) Replace sensor.
Burner cycle on and off	1. Gas pressure too high or too low. 2. Burner not grounded 3. Circuit board not grounded. 4. Faulty integrated circuit board 5. Combustion air proving switch not closing. 6. Faulty combustion air proving switch. 7. Flame sensor grounded. 8. Cracked ceramic at sensor. 9. Incorrect polarity. 10. Pin terminal loose on 9 pin plug.	1. Supply pressure should be 5" - 14" w.c. for natural gas or 11" - 14" w.c. for propane gas. 2. Make certain integrated circuit board is grounded to ignitor. 3. Make certain integrated circuit board is grounded to furnace chassis. 4. If 24 volt is available to the integrated circuit board and all other causes have been eliminated, replace board. 5. a) Make sure unit is properly vented. b) Remove obstructions from vent. c) Replace faulty tubing to pressure switch. 6. Replace combustion air proving switch. 7. Be certain flame sensor lead is not grounded or insulation or ceramic is not cracked. Replace as required. 8. Replace sensor. 9. Reverse line volt leads to integrated circuit board. 10. Replace wire harness.
No heat (Heater Operating)	1. Incorrect valve outlet pressure or orifice. 2. Cycling on limit control. 3. Improper thermostat location or adjustment.	1. Check valve outlet pressure. See Rating plate for manifold pressure. 2. Check air throughput. 3. See thermostat manufacturer's instructions.
Fan or venter motor will not run	1. Circuit open. 2. Defective integrated circuit board. 3. Defective motor or starter.	1. Check wiring and connections. 2. Replace board. 3. Replace motor or starter.
Fan or venter motor turns on and off while burner is operating	1. Motor overload device cycling on and off.	1. Check motor load against motor rating plate. Replace motor if needed.
Fan or venter motor cuts out on overload	1. Low or high voltage supply. 2. Defective motor. 3. Poor airflow. 4. Defective bearing or lubrication.	1. Correct electric supply. 2. Replace motor. 3. Clean motor, fan, fan guard, filter, and coils. 4. Lubricate bearings (motor permitting) or replace motor.

FOR SERVICE OR REPAIR, FOLLOW THESE STEPS IN ORDER:

FIRST:	Name _____			
	Address _____ _____			
	Phone _____			
SECOND:	Contact the nearest distributor (See Yellow Pages). If no listing, contact Authorized Factory Representative, 1-800-695-1901 (Press 1).			
	THIRD: Contact REZNOR®/ Thomas & Betts Corporation 150 McKinley Avenue Mercer, PA 16137 Phone: (724)662-4400			
<table border="1" style="width: 100%;"> <tr> <td>Date of Installation: _____</td> </tr> <tr> <td>Model No.: _____</td> </tr> <tr> <td>Unit Serial No.: _____</td> </tr> </table>		Date of Installation: _____	Model No.: _____	Unit Serial No.: _____
Date of Installation: _____				
Model No.: _____				
Unit Serial No.: _____				

Thomas & Betts

Form RZ-NA I-UDA, P/N 195673 Rev 11, Page 36

(800) 695-1901; www.RezSpec.com

©2006 Thomas & Betts Corporation, All rights reserved.

MANUFACTURER OF HEATING, COOLING, AND VENTILATING SYSTEMS

Trademark Note: Reznor®, TCore²®, and V3[®] are trademarks of Thomas & Betts.

3/06 Form RZ-NA I-UDA (Version A.1)